


USER'S MANUAL

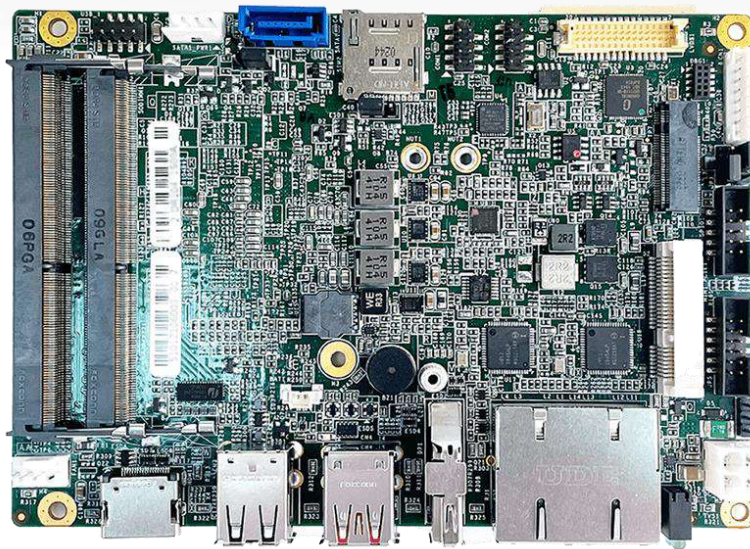

CT-DR101

3.5" SBC Industrial Motherboard with
AMD Ryzen™ Embedded R1000/V1000 Series Processor

Table of Contents

Prefaces	04
Revision	04
Disclaimer	04
Copyright Notice	04
Trademarks Acknowledgment	04
Environmental Protection Announcement	04
Safety Precautions	05
Technical Support and Assistance	06
Conventions Used in this Manual	06
Chapter 1 Product Introductions	07
1.1 Product Description	08
1.2 Specifications	09
1.3 Available Models	10
Chapter 2 Mechanical Specifications	11
2.1 Switch and Connector Locations	12
2.2 Connector / Switch Definition	14
2.3 I/O Interface Descriptions	15
2.3.1 Clear CMOS.....	15
2.3.2 Panel Power setting	15
2.3.3 Backlight Power setting	16
2.3.4 Front Panel Header	17
2.3.5 AT/ATX setting	18
2.3.6 Panel control	19
2.3.7 USB2	20
2.3.8 USB 3.2	21
2.3.9 Expansion I/O	22
2.3.10 COM1 Port	23
2.3.11 COM2 Port	24
2.3.12 GPIO	25
2.3.13 SATA	26
2.3.14 SATA_PWR	27
2.3.15 USB2.0 Header	28
2.3.16 Power IN	29
2.3.17 FAN PWR	30
2.3.18 HDMI Display	31
2.3.19 Display Port	32
2.3.20 Dual RJ45	33
2.3.21 LVDS Header	34
2.3.22 M.2 B key	35
2.3.23 SIM Card	37
2.3.24 Battery	38
2.3.25 Buzzer	38
2.3.26 Memory	39

Chapter 3	System Setup	40
3.1	Heat Sink Installation	41
Chapter 4	System BIOS	43
4.1	BIOS Introduction	44
4.2	Main Setup	45
4.3	Advanced Setup	46
4.3.1	Trusted Computing	47
4.3.2	ACPI Settings	48
4.3.3	IDE Configuration	49
4.3.4	Super IO Configuration	50
4.3.5	Hardware Monitor	53
4.3.6	Serial Port Console Redirection	55
4.3.7	CPU Configuration	57
4.3.8	USB Configuration	58
4.3.9	Network Stack Configuration	59
4.3.10	CSM Configuration	60
4.3.11	AMD CBS	61
4.4	Chipset	62
4.4.1	SB USB Configuration	62
4.4.2	North Bridge Configuration	63
4.5	Security	64
4.6	Boot	67
4.7	Save and Exit	68
Appendix	WDT & GPIO	69
	WDT Sample Code	70
	GPIO Sample Code	71

Prefaces

Revision

Revision	Description	Date
1.0	Initial release	2022/07/14

Disclaimer

All specifications and information in this User's Manual are believed to be accurate and up to date. C&T Solution Inc. does not guarantee that the contents herein are complete, true, accurate or non-misleading. The information in this document is subject to change without notice and does not represent a commitment on the part of C&T Solution Inc.

C&T Solution Inc. disclaims all warranties, express or implied, including, without limitation, those of merchantability, fitness for a particular purpose with respect to contents of this User's Manual. Users must take full responsibility for the application of the product.

Copyright Notice

All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, without the prior written permission of C&T Solution Inc. Copyright © C&T Solution Inc.

Trademarks Acknowledgment

Intel®, Celeron® and Pentium® are trademarks of Intel Corporation.

AMD Ryzen™ are trademarks of AMD Corporation.

Windows® is registered trademark of Microsoft Corporation.

AMI is trademark of American Megatrend Inc.

IBM, XT, AT, PS/2 and Personal System/2 are trademarks of International Business Machines Corporation

All other products and trademarks mentioned in this manual are trademarks of their respective owners.

Environmental Protection Announcement

Do not dispose this electronic device into the trash while discarding. Please recycle to minimize pollution and ensure environment protection.



Safety Precautions

Before installing and using the equipment, please read the following precautions:

- Put this equipment on a reliable surface during installation. Dropping it or letting it fall could cause damage.
- The power outlet shall be installed near the equipment and shall be easily accessible.
- Turn off the system power and disconnect the power cord from its source before making any installation. Be sure both the system and the external devices are turned OFF. Sudden surge of power could ruin sensitive components. Make sure the equipment is properly grounded.
- When the power is connected, never open the equipment. The equipment should be opened only by qualified service personnel.
- Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- Disconnect this equipment from the power before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- Avoid the dusty, humidity and temperature extremes.
- Do not place heavy objects on the equipment.
- If the equipment is not used for long time, disconnect it from the power to avoid being damaged by transient over-voltage.
- The storage temperature shall be above -40°C and below 85°C .
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- If one of the following situation arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well or it cannot work according the user's manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious signs of breakage.

Technical Support and Assistance

1. Visit the C&T Solution Inc website at <https://www.candtsolution.com> where you can find the latest information about the product.
2. Contact your distributor, our technical support team or sales representative for technical support if you need additional assistance. Please have following information ready before you call:
 - Model name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Conventions Used in this Manual

**WARNING**

This indication alerts operators to an operation that, if not strictly observed, may result in severe injury.

**CAUTION**

This indication alerts operators to an operation that, if not strictly observed, may result in safety hazards to personnel or damage to equipment.

**NOTE**


This indication provides additional information to complete a task easily.

Chapter 1

Product Introductions

1.1 Product Description

The CT-DR101 is a single board computer in 3.5" SBC Industrial Motherboard with AMD Ryzen™ Embedded R1000/V1000 Series Processor

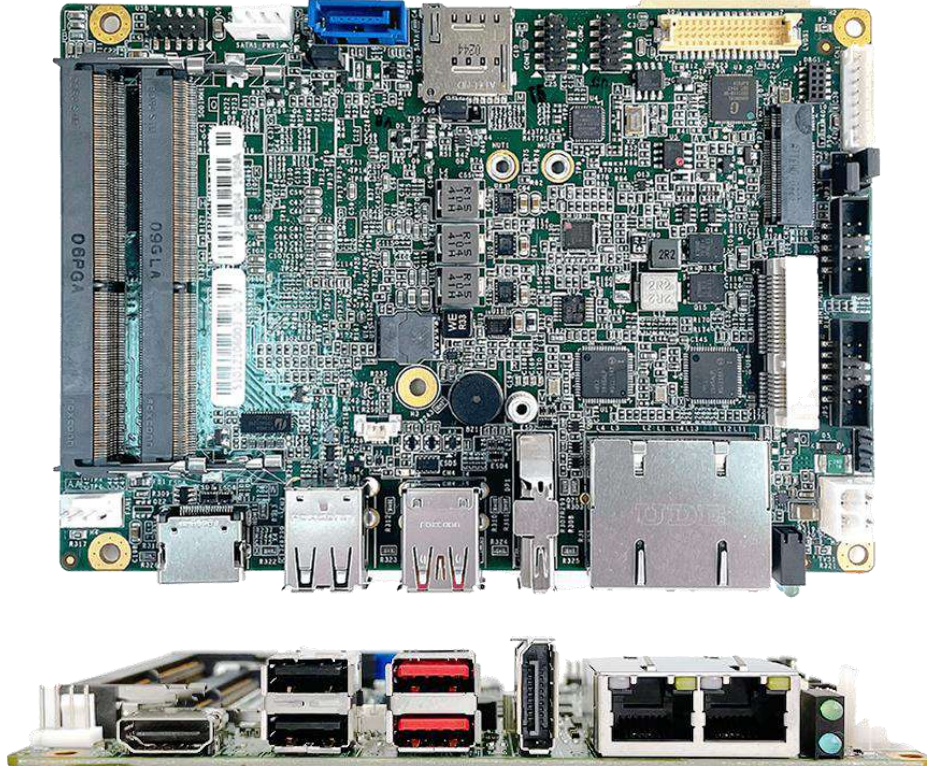

- Support AMD Ryzen™ Embedded R1000/V1000 Series
- 2x 260-pin DDR4 2400 SO-DIMM. Max. up to 32GB
- 2x Intel® GbE (Support Wake-on-LAN and PXE)
- Triple independent display Supported
- 1x Front Panel with Audio support by internal header
- 1x full-size Mini PCIe for expansion modules
- 1x M.2 B Key for 4G/5G communications & Storage
- 2x USB 3.2 Gen 2, 2x USB 2.0
- 2x COM RS-232/422/485 (internal)
- 1x SATA 6.0 Gb/s
- Watchdog timer 1~225sec. system reset
- TPM 2.0 Supported

1.2 Specifications

System	
Processor Support AMD Ryzen™ Embedded R1000/V1000 Series <ul style="list-style-type: none"> • AMD Ryzen™ Embedded V1605B with Radeon™ Vega 8 Graphics, 4M Cache, 4 Cores, 8 Threads, Up to 3.6 GHz • AMD Ryzen™ Embedded R1606G with Radeon™ Vega 3 Graphics, 4M Cache, 2 Cores, 4 Threads, Up to 3.5 GHz 	
System Chipset	SoC
LAN Chipset	<ul style="list-style-type: none"> • GbE1: Intel i210 (Support Wake-on-LAN and PXE) • GbE2: Intel i210 (Support Wake-on-LAN and PXE)
Audio Codec	Realtek ALC888S HD Audio Codec
System Memory	2x 260-Pin DDR4 2400 MHz SO-DIMM. Max. up to 32GB (ECC and Non-ECC)
Graphics	<ul style="list-style-type: none"> • AMD Radeon™ Vega 8 (V1605B) • AMD Radeon™ Vega 3 (R1606G)
BIOS	AMI uEFI 64 Mbit SPI flash
Watchdog	Software Programmable Supports 1~255 sec. System Reset
TPM	TPM 2.0

Display	
Display Port	1x DisplayPort 1.4, DP++, Support resolution 3840 x 2160, 60Hz
HDMI	1x HDMI 2.0b, Support resolution 3840 x 2160, 60Hz (Optional)
LVDS	1x 24-bit dual channel LVDS, Support resolution up to 1920x1200, 60Hz
Multiple Display	3x Independent display for R1000 & V1000 series

Storage	
M.2	1x M.2 B Key, 3042, Support SATA
SATA	1x SATA 7-Pin Connector
SIM Socket	1x SIM socket (M.2 B Key attached)

Expansion	
Mini PCIe	1x Full-size Mini PCIe (PCIe x1, USB 2.0)

Rear I/O	
LAN	2x RJ45
USB	2x USB 3.2 Gen2 (10Gbps) 2x USB 2.0
HDMI	1x HDMI
Display Port	1x Display Port
Others	1x Power LED, 1x HDD LED indicator

Internal I/O	
Audio	2x 6-Pin Front Panel Header
COM	2x RS-232/422/485
DIO	2x 4-Bit DIO (4 In / 4 Out)
Other	<ul style="list-style-type: none"> • 1x Front Panel header • 1x 4-Pin FAN Connector • 1x RTC Battery Cable • 1x 50-Pin High Speed Connector (PCIe x4)

Operating System	
Windows	Windows 10
Linux	Linux Kernel 5.x (Fedora 30 or above / Ubuntu 19.04 or above)

Power	
Power Management	ACPI OVP / OCP / Power reverse protection support
Power Mode	AT/ ATX 12V
Power Connector	4-pin power connector (internal)

Environment	
Form Factor	3.5" Embedded SBC
Operating Temperature	-40°C ~ 75°C, 95% (non-condensing), operating
Storage Temperature	-40°C ~ 85°C, 95% (non-condensing), Non-operating
Relative Humidity	10% ~ 90% relative humidity, non-condensing

Physical	
Dimensions	146 mm x 102 mm

1.3 Available Models

Ordering Information	DESCRIPTION
CT-DR101-V1605B	3.5" SBC with AMD Ryzen™ Embedded V1605B, 1x DP, 1x HDMI, 2x LAN, 4x USB 3.2
CT-DR101-R1606G	3.5" SBC with AMD Ryzen™ Embedded R1606G, 1x DP, 1x HDMI, 2x LAN, 4x USB 3.2

Packing List


- 1x CT-DR10x Main Board
- 1x Heat Sink and screws
- 1x Front Panel Cable, 2x Buttons, 2x Audio, 2x LED Cable 300mm
- 1x COM Port Cable 300mm
- 1x SATA Y-Cable with SATA and SATA Power 100mm
- 2x Screw for mini-PCI-e Card or M.2

Chapter 2


Mechanical Specifications

2.1 Switch and Connector Locations


2.1.1 Top View

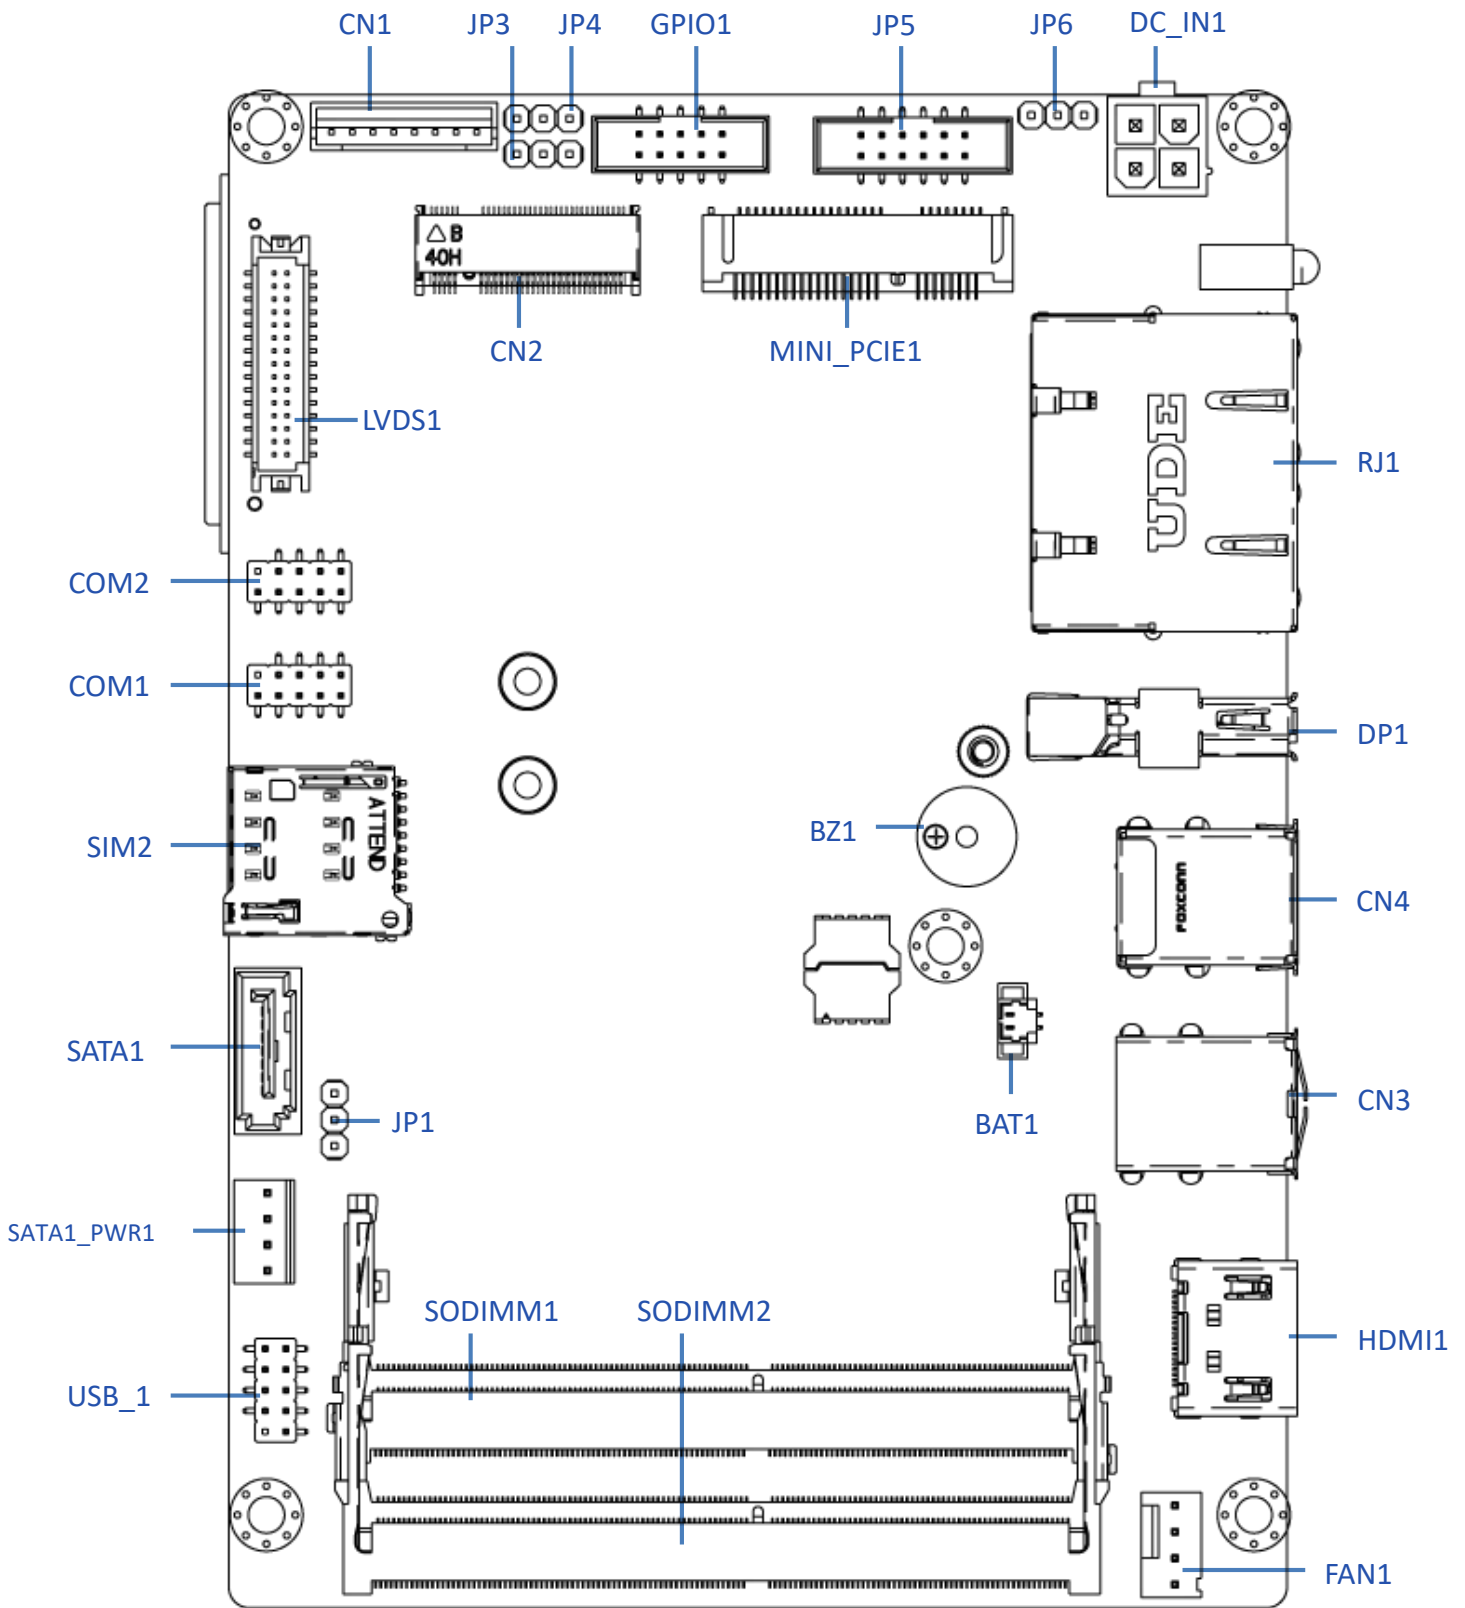

2.1.2 Bottom View

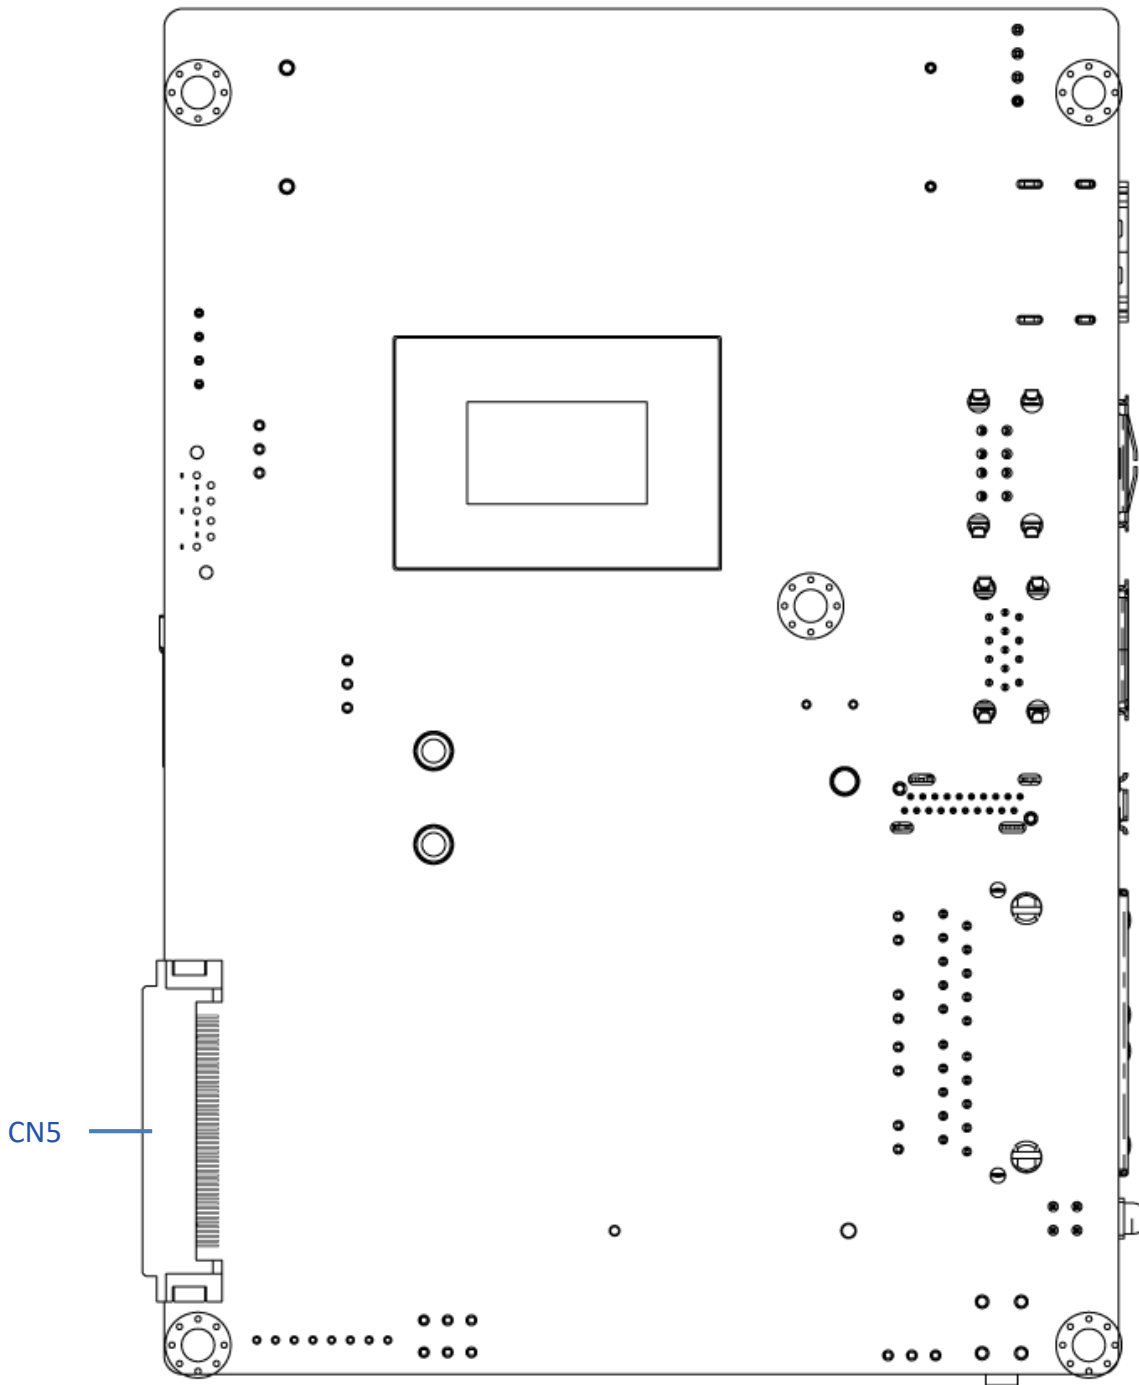

2.1.3 Rear I/O

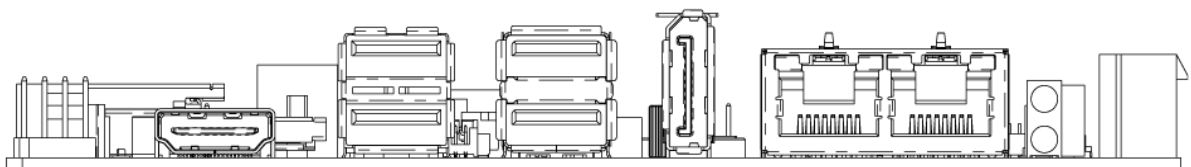


2.2 Connector / Switch Definition

Connector Location	Definition
JP1	Clear CMOS
JP3	Panel PWR setting
JP4	Backlight PWR setting
JP5	Front Panel
JP6	AT/ATX setting
CN1	Panel Control
CN2	M.2 B key
CN3	USB 2.0 port
CN4	USB 3.2 Gen 2
CN5	Expansion I/O
COM1	COM Port
COM2	COM Port
GPIO1	4IN/4OUT GPIO header
SATA1	SATA Port 1 signal connector
SATA1_PWR	SATA Port 1 power connector
LVDS1	LVDS connector
USB_1	USB 2.0 header
MINI_PCIE1	Mini PCI Express slot 1
DC_IN1	4 PIN Power connector
FAN1	FAN Power connector
RJ1	Dual LAN ports
HDMI1	HDMI signal connector
DP1	DP signal connector
BAT1	Battery
SIM2	SIM Card
BZ1	Buzzer
SODIMM1 / SODIMM2	Memory

2.3 I/O Interface Descriptions


2.3.1 Clear CMOS

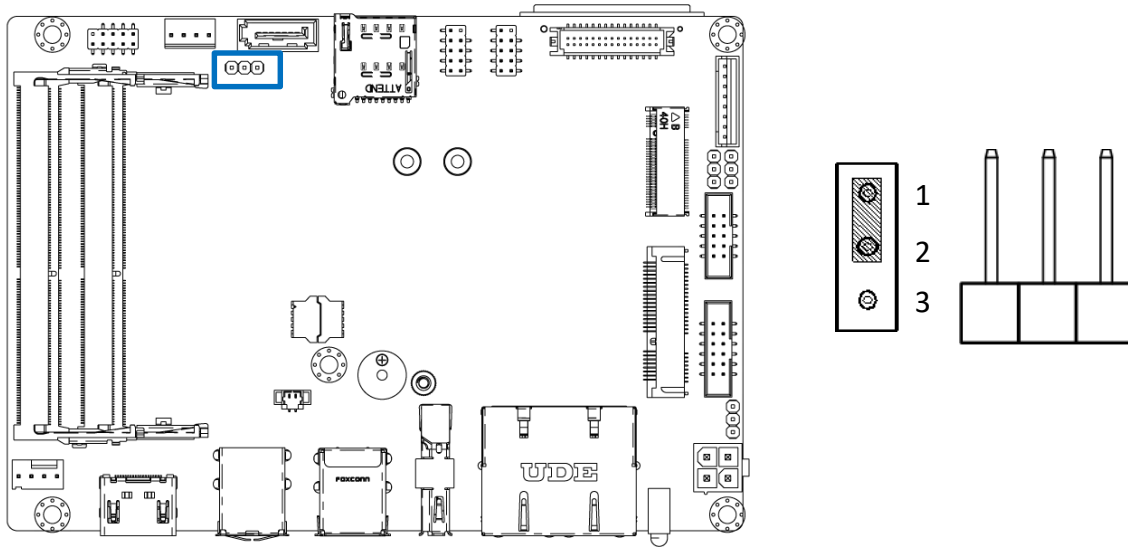

JP1

Pin	Signal
1	NC
2	RTCST#
3	GND

2.3.2 Panel Power setting

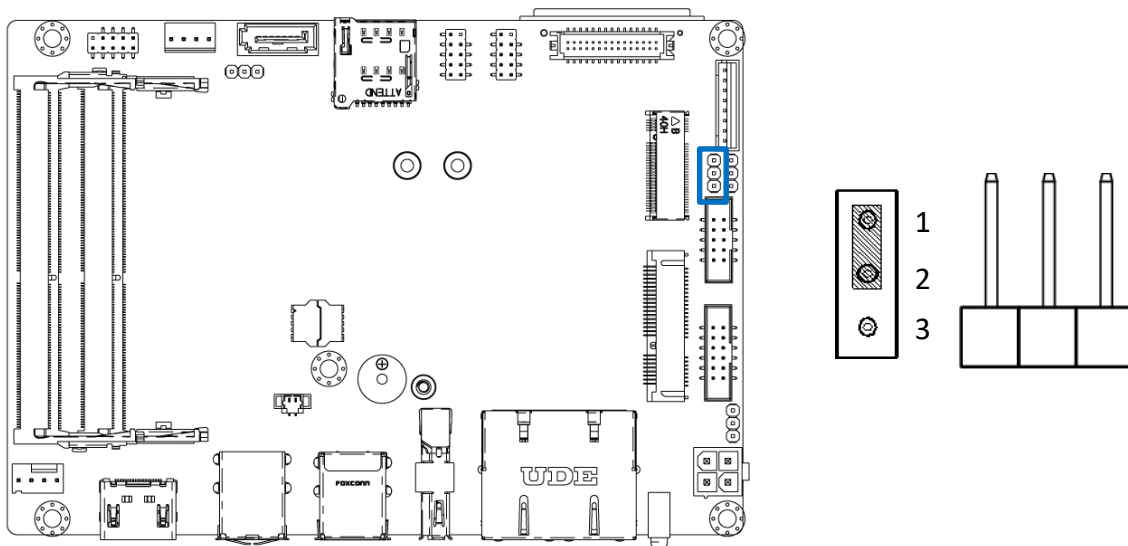


JP3

Pin	Signal
1	+V3.3A
2	P3P5V
3	+V5A

2.3 I/O Interface Descriptions

2.3.3 Backlight Power setting

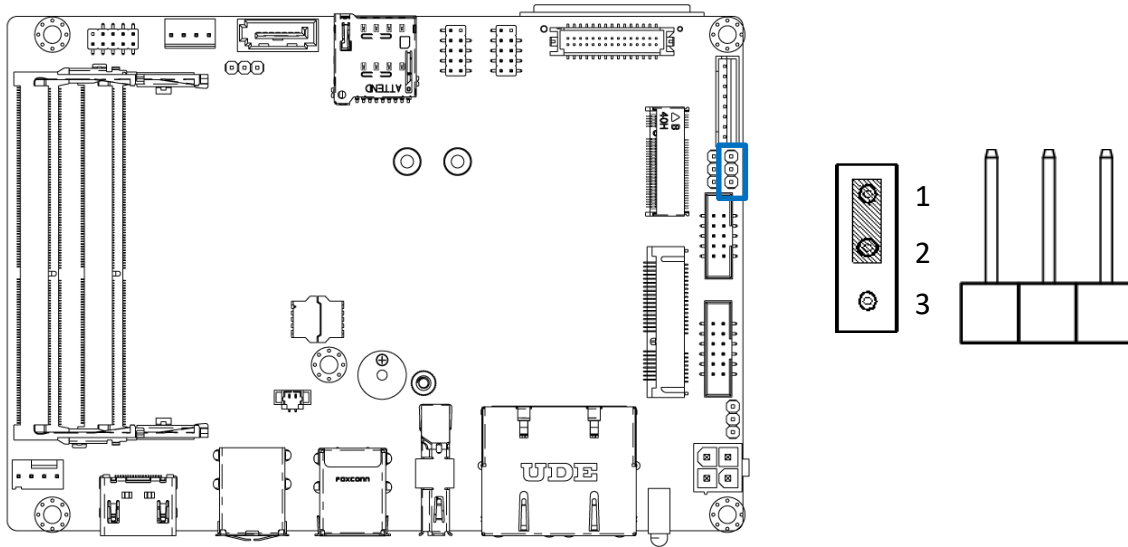


JP4

Pin	Signal
1	+V12A
2	P5P12V
3	+V5A

2.3 I/O Interface Descriptions

2.3.4 Front Panel Header

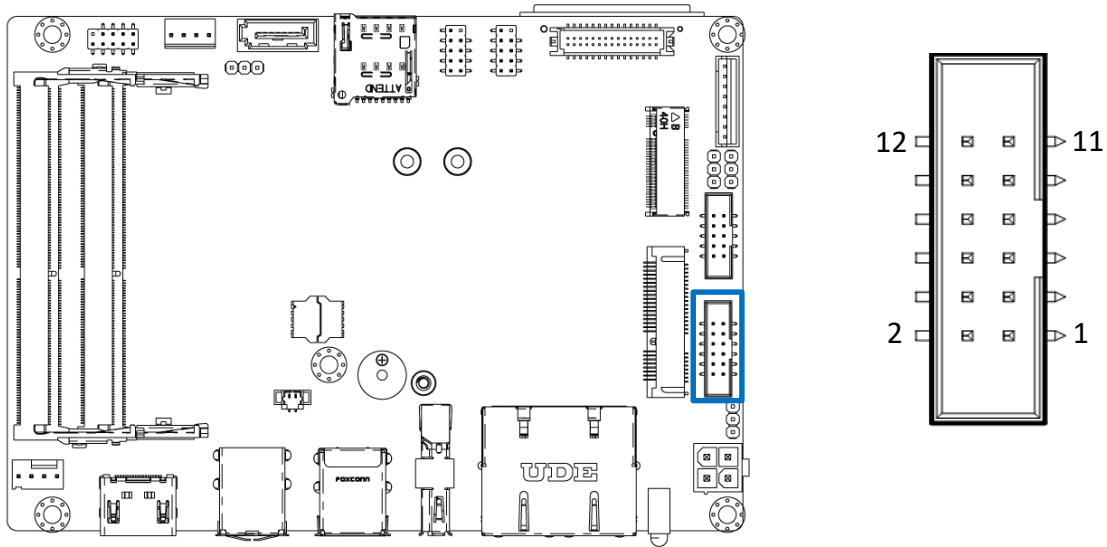


JP5

Pin	Signal	Pin	Signal
1	Power(3.3V)	2	SATA_LED#
3	Power(3.3V)	4	GND
5	LOUT_R	6	RESET_BUTTON_N
7	LOUT_L	8	PS_ON_BUTTON_N
9	MICIN1_R	10	GND
11	MICIN1_L	12	AGND_HD

2.3 I/O Interface Descriptions

2.3.5 AT/ATX setting

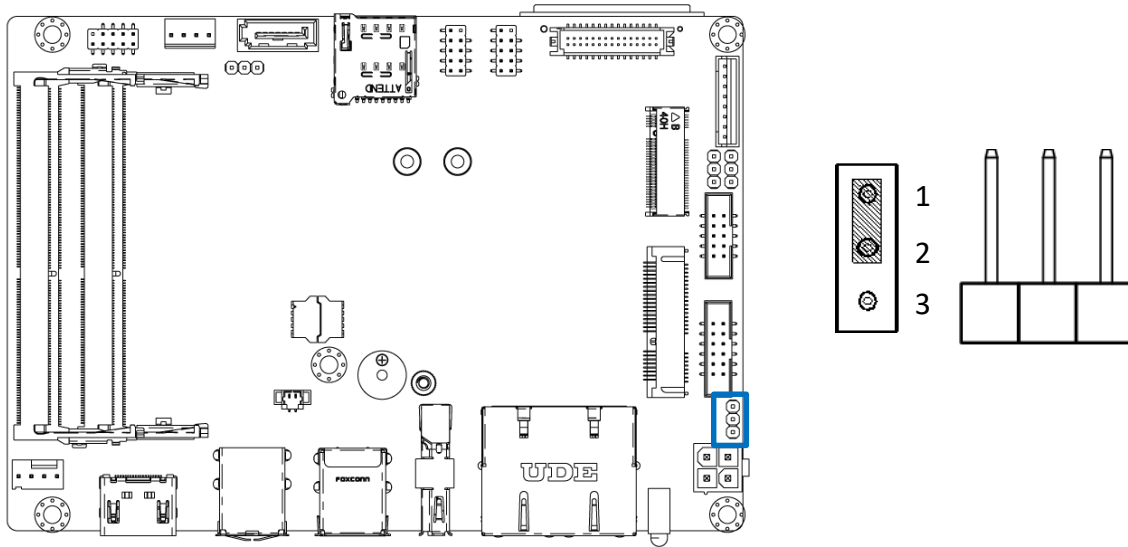


JP6

Pin	Signal
1	NC
2	AT MODE
3	PS_ON_BUTTON_N

2.3 I/O Interface Descriptions

2.3.6 Panel control

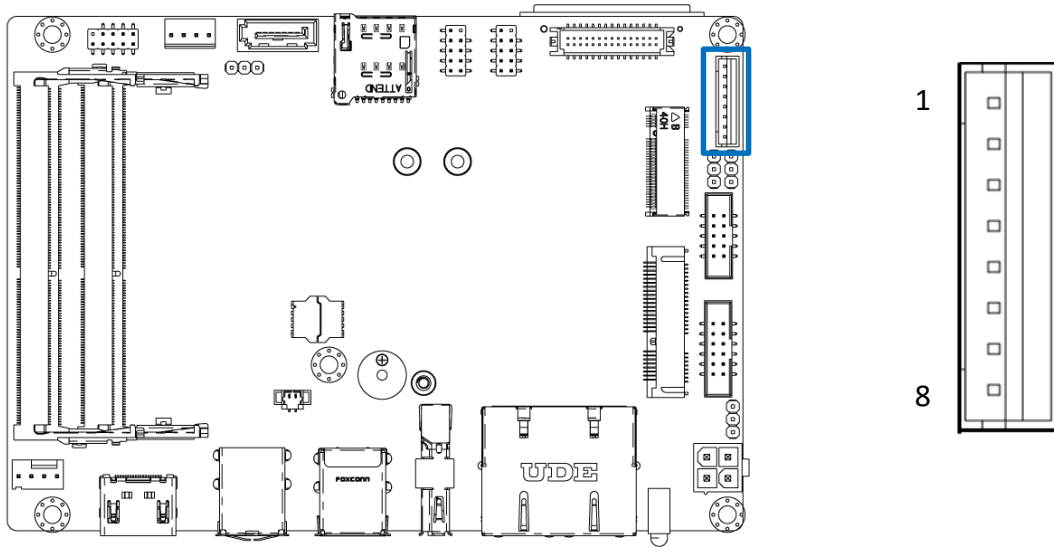


CN1

Pin	Signal	Pin	Signal
1	LVDS_BKLTEN	2	LBKLT_CTRL
3	BLPWR	4	BLPWR
5	GND	6	GND
7	CH7511_BLUP	8	CH7511_BLDN

2.3 I/O Interface Descriptions

2.3.7 USB2

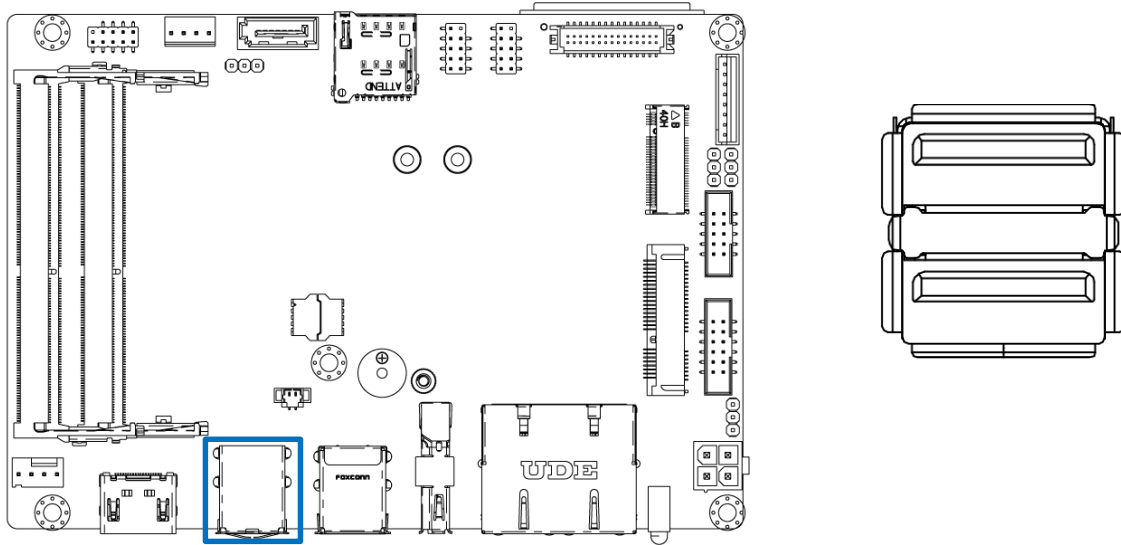


CN3

Pin	Signal	Pin	Signal
1	USBVCC0	5	USBVCC0
2	USB0N_CONN	6	USB4N_CONN
3	USB0P_CONN	7	USB4P_CONN
4	GND	8	GND

2.3 I/O Interface Descriptions

2.3.8 USB 3.2

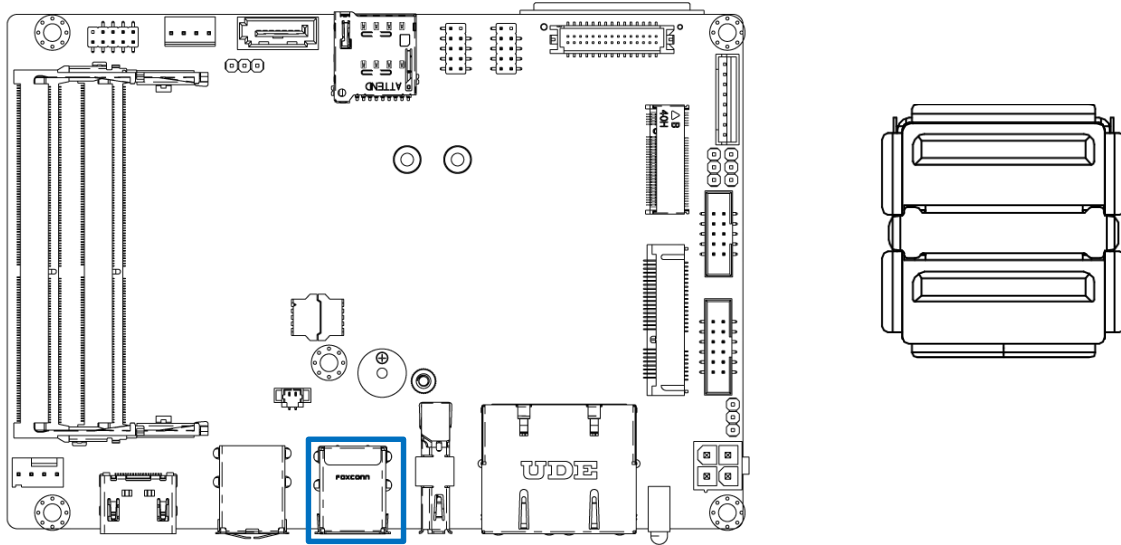


CN4

Pin	Signal	Pin	Signal
1	USBVCC0	10	USBVCC1
2	USB2-2N_CONN	11	USB1N_CONN
3	USB2-2P_CONN	12	USB1P_CONN
4	GND	13	GND
5	USB3-RN2_CONN	14	USB3-RN1_CONN
6	USB3-RP2_CONN	15	USB3-RP1_CONN
7	GND	16	GND
8	USB3-TN2_CONN	17	USB3-TN1_CONN
9	USB3-TP2_CONN	18	USB3-TP1_CONN

2.3 I/O Interface Descriptions

2.3.9 Expansion I/O

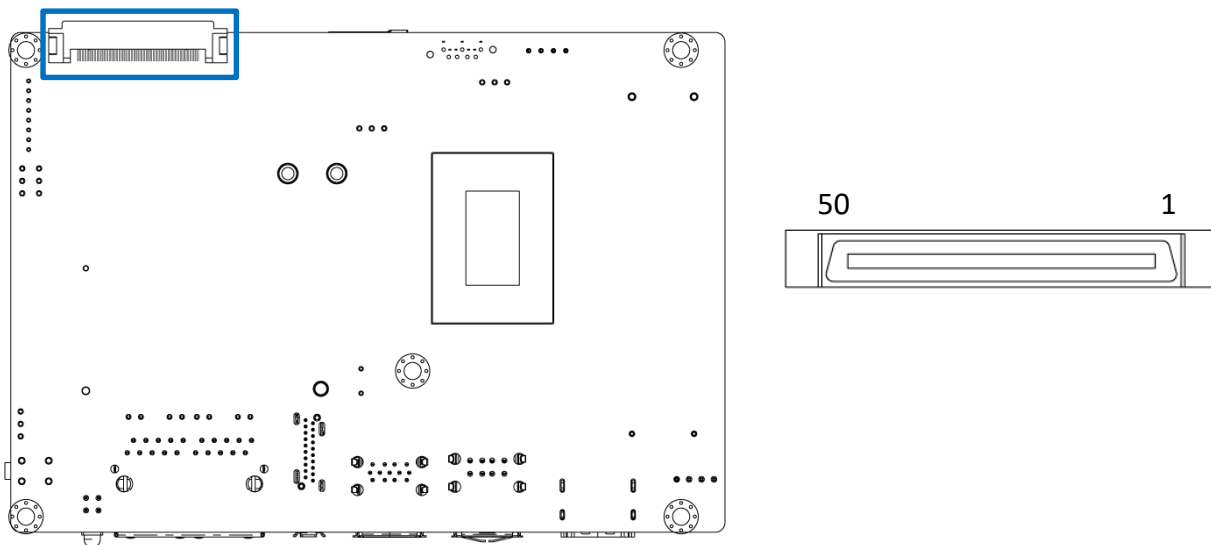


CN5

Pin	Signal	Pin	Signal
1	PE1_TX+	26	PE3_RX-
2	PE1_TX-	27	GND
3	GND	28	GND
4	GND	29	PE4_TX+
5	PE1_RX+	30	PE4_TX-
6	PE1_RX-	31	GND
7	GND	32	GND
8	GND	33	PE4_RX+
9	PE2_TX+	34	PE4_RX-
10	PE2_TX-	35	GND
11	GND	36	USB_OP
12	GND	37	USB_ON
13	PE2_RX+	38	Power_BTN
14	PE2_RX-	39	SYS_RST#
15	GND	40	PLTST_N
16	GND	41	SMB_DAT(3.3V)
17	REF_CLK+	42	SMB_CLK(3.3V)
18	REF_CLK-	43	+V3.3S
19	GND	44	+V3.3S
20	GND	45	+V3.3S
21	PE3_TX+	46	+V3.3S
22	PE3_TX-	47	+V5S
23	GND	48	+V5S
24	GND	49	+V5S
25	PE3_RX+	50	+V5S

2.3 I/O Interface Descriptions

2.3.10 COM Port

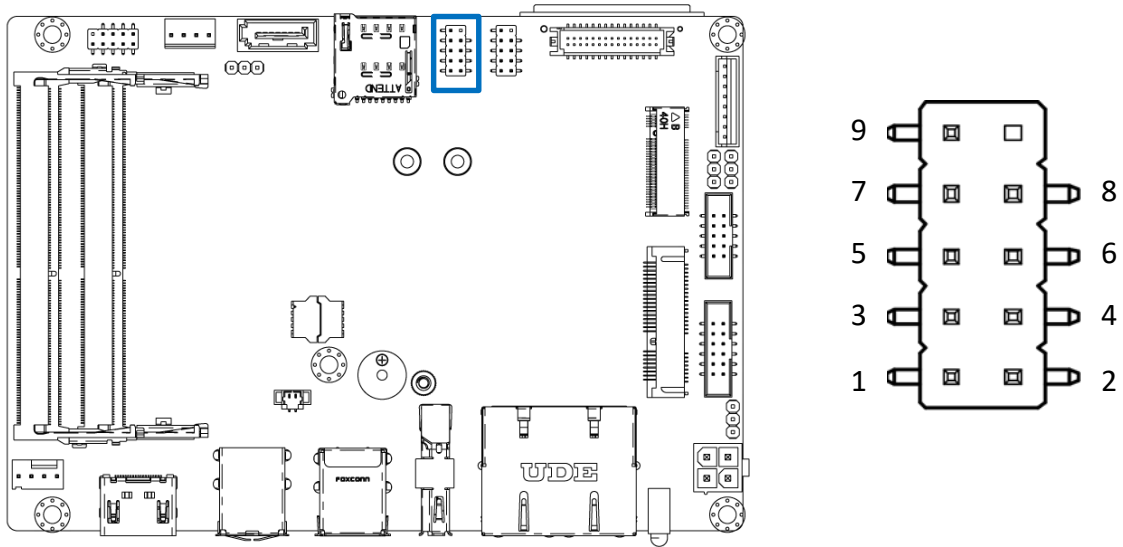


COM1

Pin	Signal	Pin	Signal
1	CM1_DCD	2	CM1_DSR
3	CM1_RXD	4	CM1_RTS
5	CM1_TXD	6	CM1_CTS
7	CM1_DTR	8	CM1_RI
9	GND	10	NC

2.3 I/O Interface Descriptions

2.3.11 COM Port

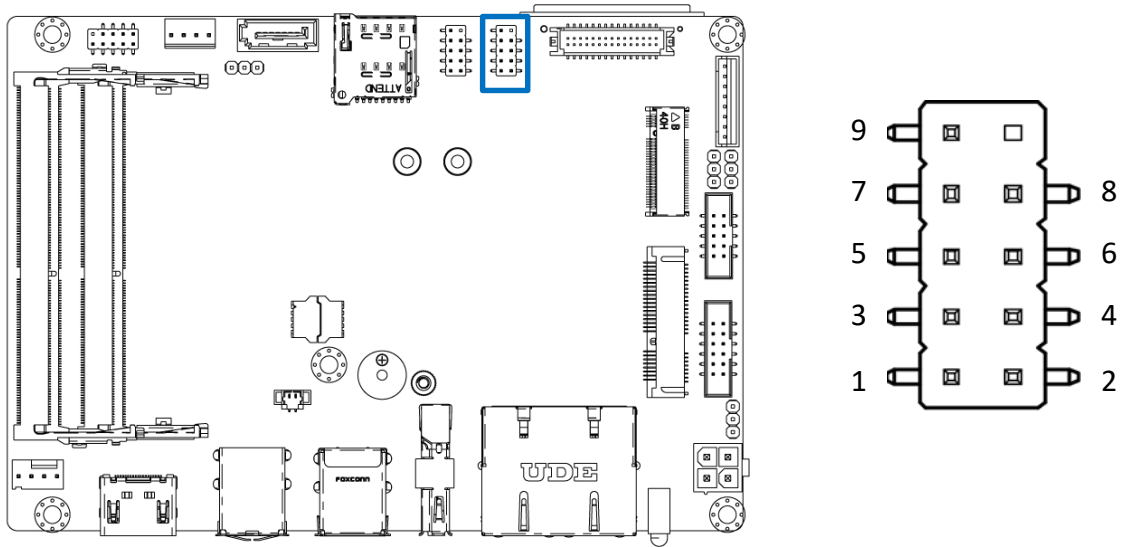


COM2

Pin	Signal	Pin	Signal
1	CM2_DCD	2	CM2_DSR
3	CM2_RXD	4	CM2_RTS
5	CM2_TXD	6	CM2_CTS
7	CM2_DTR	8	CM2_RI
9	GND	10	NC

2.3 I/O Interface Descriptions

2.3.12 GPIO

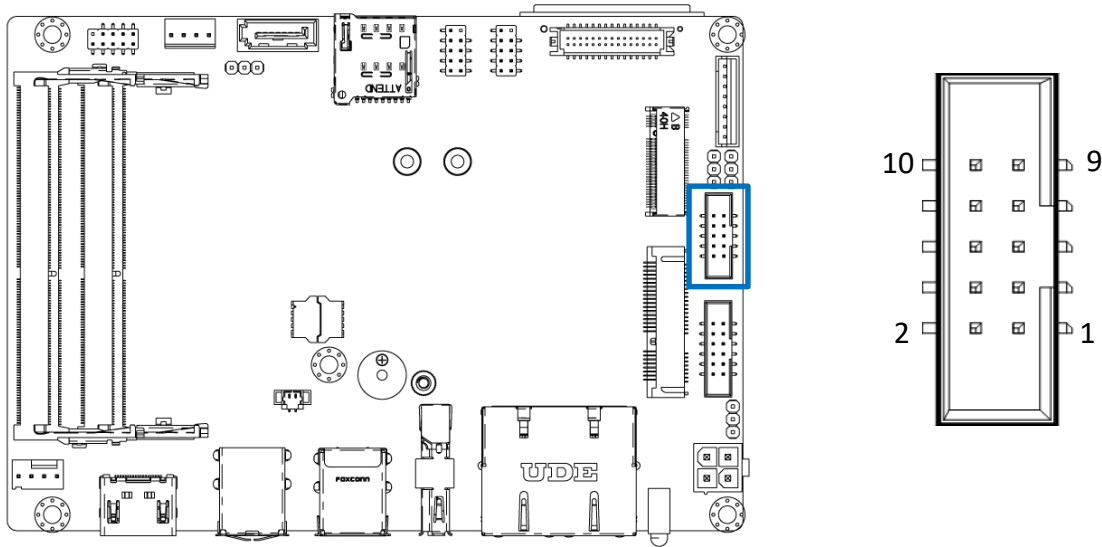


GPIO1

Pin	Signal	Pin	Signal
1	Power	2	GND
3	SIO_GPI1	4	SIO_GPO1
5	SIO_GPI2	6	SIO_GPO2
7	SIO_GPI3	8	SIO_GPO3
9	SIO_GPI4	10	SIO_GPO4

2.3 I/O Interface Descriptions

2.3.13 SATA

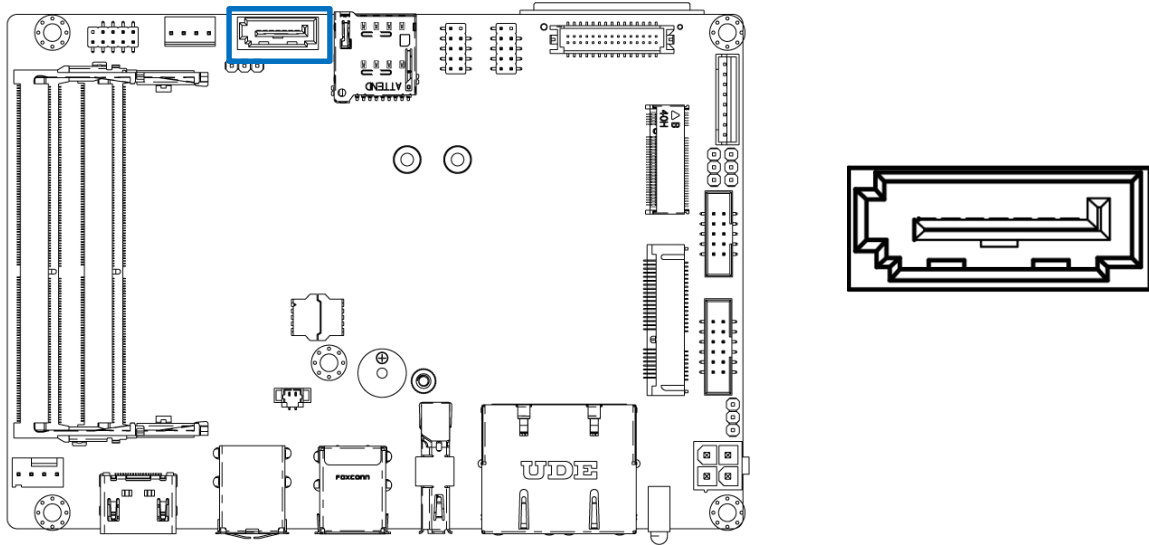


SATA1

Pin	Signal
1	GND
2	SATA_TX0_C_DC_DP
3	SATA_TX0_C_DC_DN
4	GND
5	SATA_RX0_DC_DN
6	SATA_RX0_DC_DP
7	GND

2.3 I/O Interface Descriptions

2.3.14 SATA_PWR

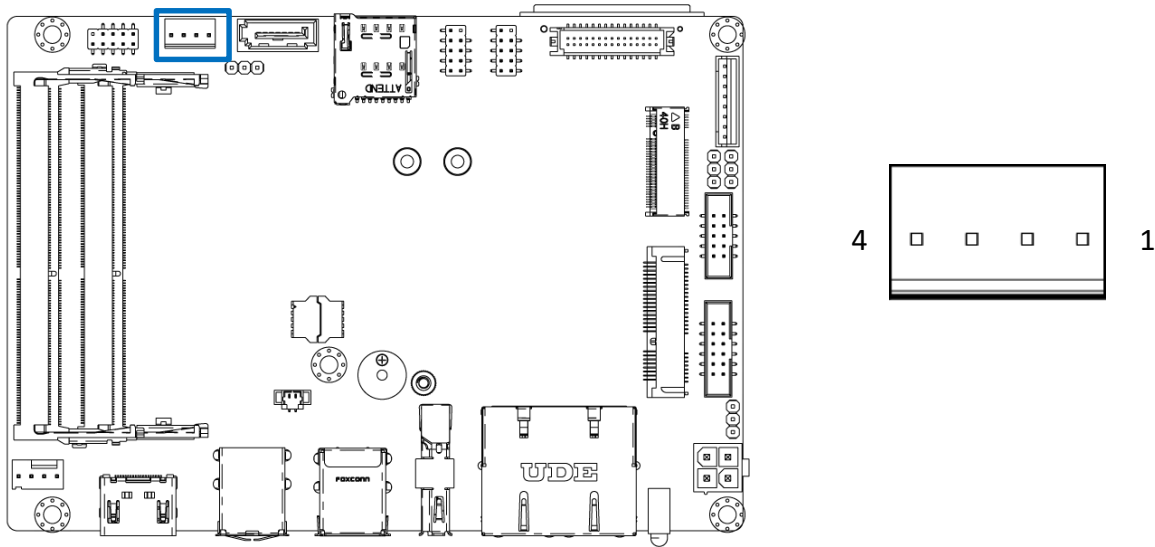


SATA1_PWR1

Pin	Signal
1	+V5S
2	GND
3	GND
4	+V12S

2.3 I/O Interface Descriptions

2.3.15 USB2.0 Header

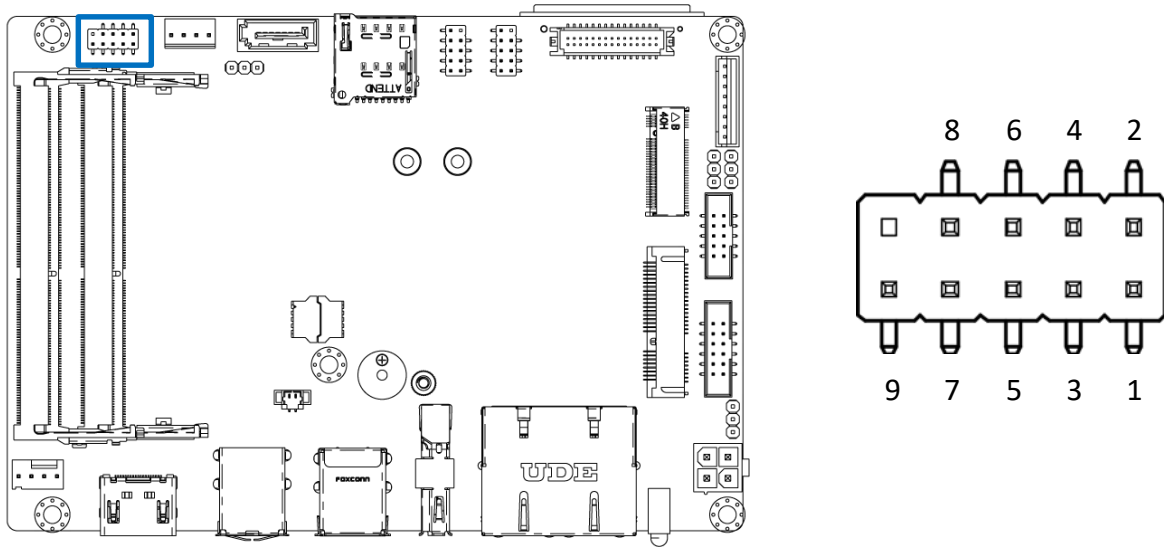


USB_1

Pin	Signal	Pin	Signal
1	USBVCC2	2	USBVCC2
3	USB2-5N_CONN	4	USB2-6N_CONN
5	USB2-5P_CONN	6	USB2-6P_CONN
7	GND	8	GND
9	NC		

2.3 I/O Interface Descriptions

2.3.16 Power IN

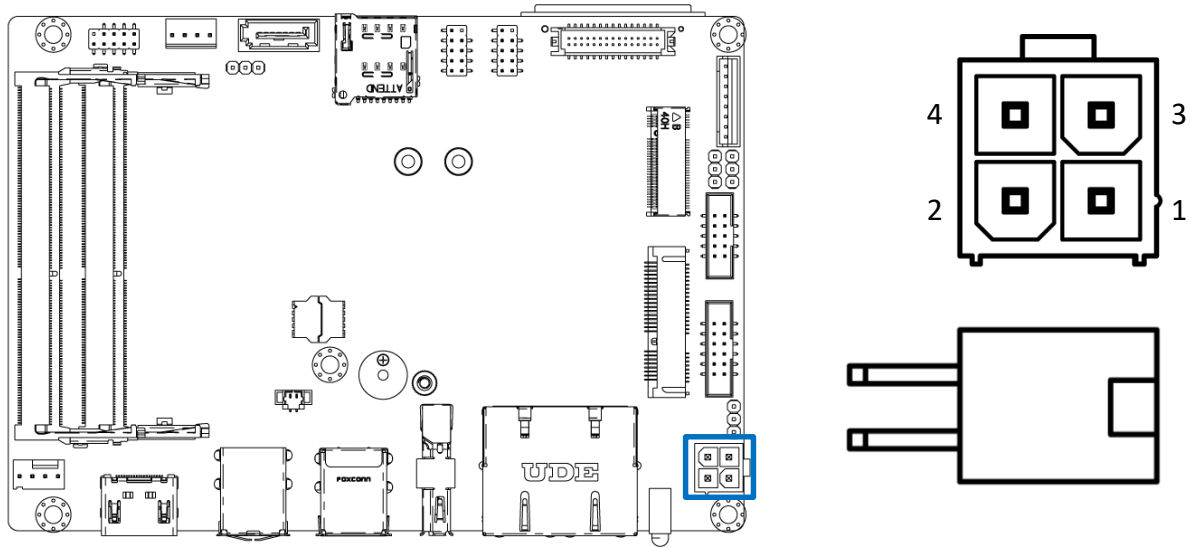


DC_IN1

Pin	Signal
1	GND
2	GND
3	12V
4	12V

2.3 I/O Interface Descriptions

2.3.17 FAN PWR

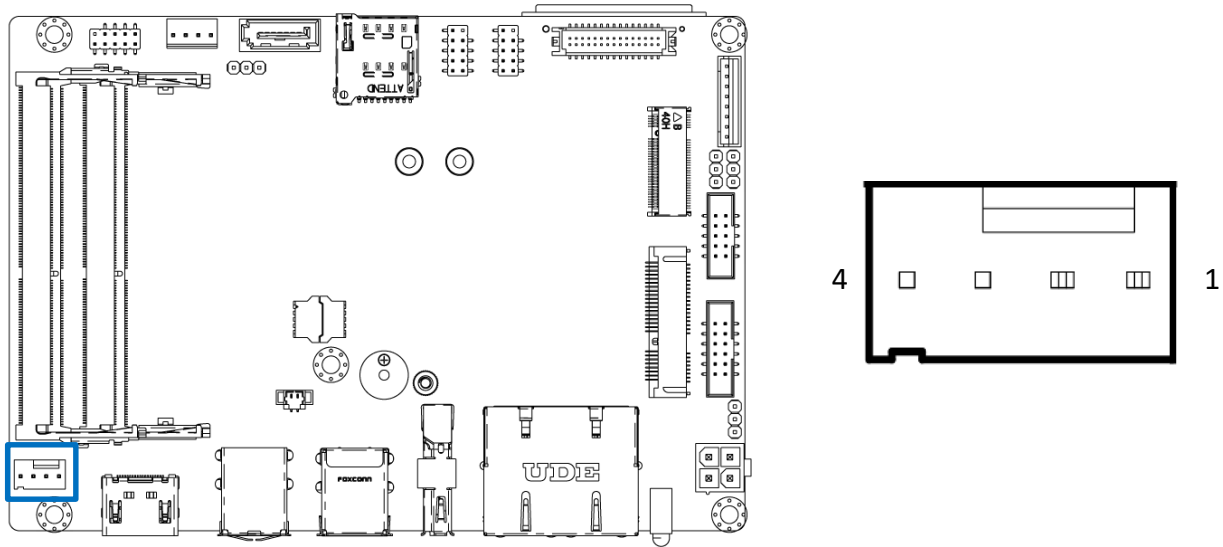


FAN1

Pin	Signal
1	FANCTL1
2	FAN_SEN1
3	FAN_IN1
4	GND

2.3 I/O Interface Descriptions

2.3.18 HDMI Display

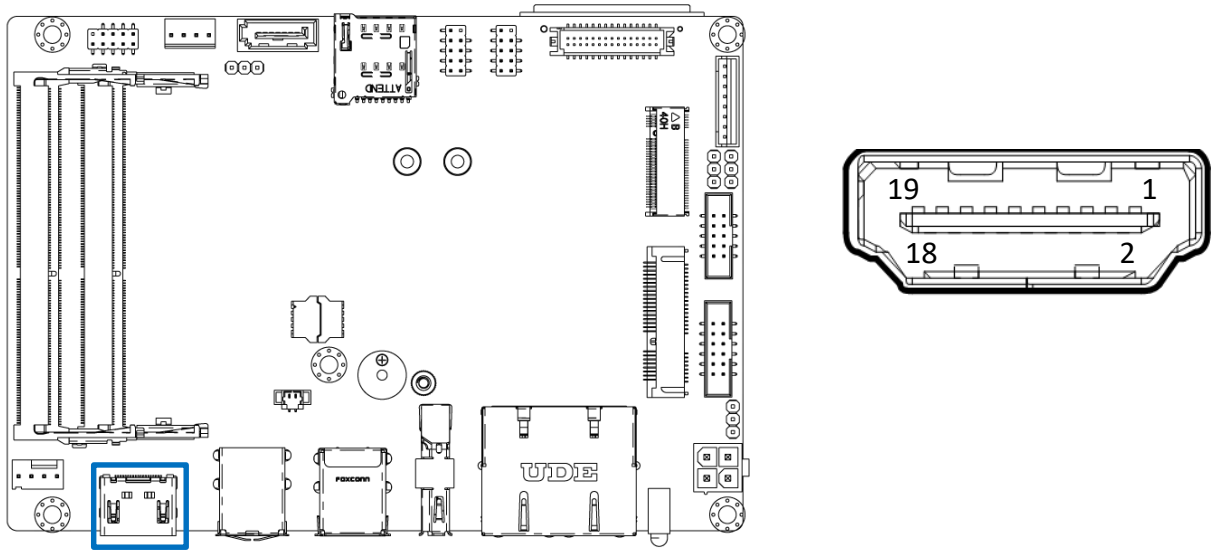


HDMI1

Pin	Signal	Pin	Signal
1	HDMI_TX2+_C	11	GND
2	GND	12	HDMI_TXC-_C
3	HDMI_TX2-_C	13	NC
4	HDMI_TX1+_C	14	NC
5	GND	15	HDMI_SCL
6	HDMI_TX1-_C	16	HDMI_SDA
7	HDMI_TX0+_C	17	GND
8	GND	18	VCC5_HDMI
9	HDMI_TX0-_C	19	HDMI_HPD_CON
10	HDMI_TXC+_C	20	

2.3 I/O Interface Descriptions

2.3.19 Display Port

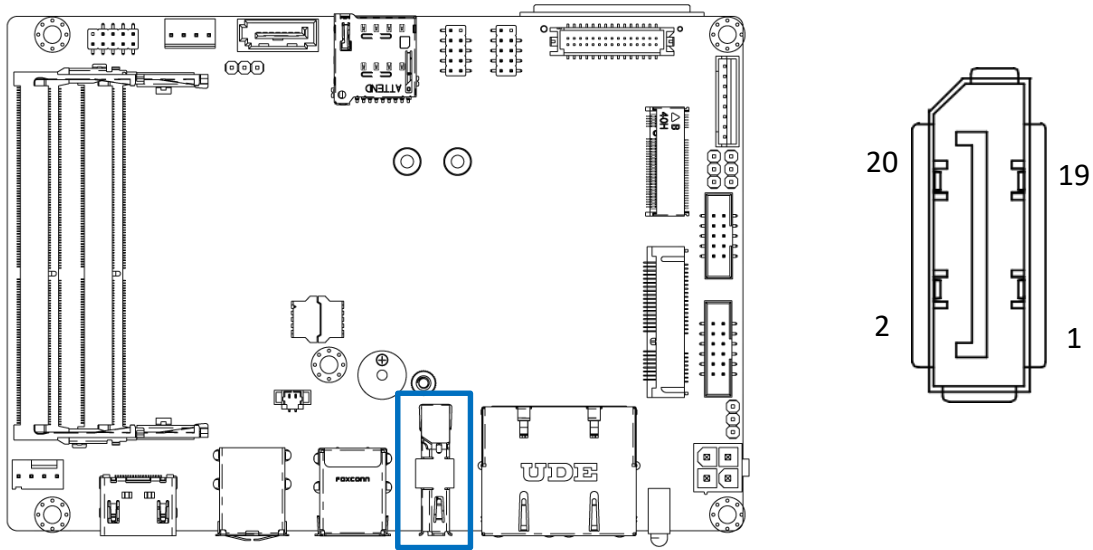


DP1

Pin	Signal	Pin	Signal
1	ML_LANE0+	11	GND
2	GND	12	ML_LANE3-
3	ML_LANE0-	13	GND
4	ML_LANE1+	14	GND
5	GND	15	AUX CH+
6	ML_LANE1-	16	GND
7	ML_LANE2+	17	AUX CH-
8	GND	18	HPD
9	ML_LANE2-	19	DP_PWR Return
10	ML_LANE3+	20	DP_PWR

2.3 I/O Interface Descriptions

2.3.20 Dual RJ45

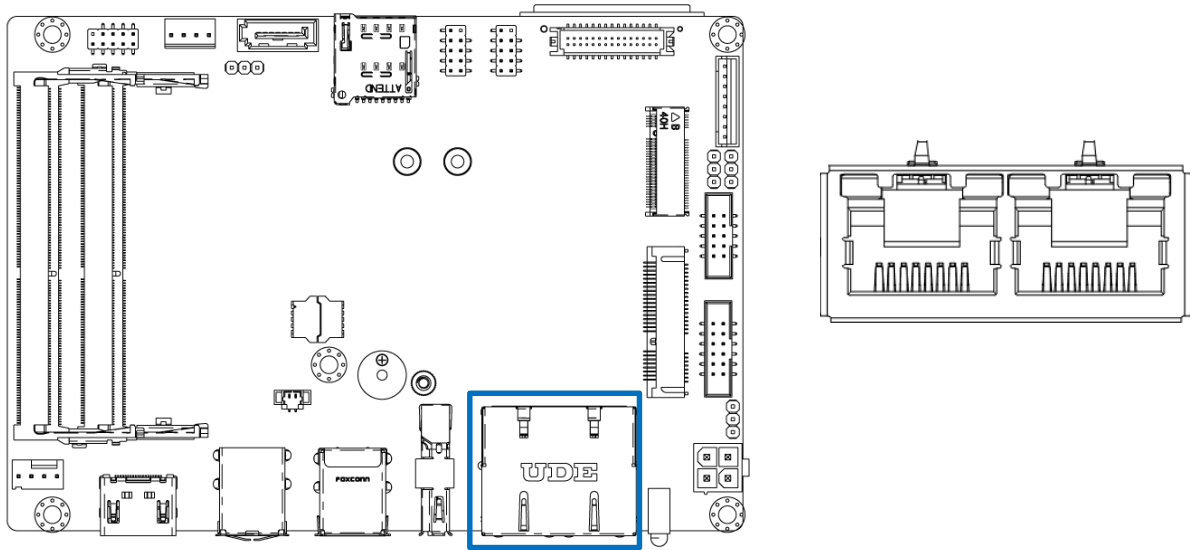


RJ1

Pin	Signal	Pin	Signal
1	R1 GBE1_MDI0P	11	R1 GBE2_MDI0P
2	R2 GBE1_MDION	12	R2 GBE2_MDION
3	R3 GBE1_MDI1P	13	R3 GBE2_MDI1P
4	R4 GBE1_MDI1N	14	R4 GBE2_MDI1N
5	R5 GBE0_CT	15	R5 GBE0_CT
6	R6 GBE0_CT	16	R6 GBE0_CT
7	R7 GBE1_MDI2P	17	R7 GBE2_MDI2P
8	R8 GBE1_MDI2N	18	R8 GBE2_MDI2N
9	R9 GBE1_MDI3P	19	R9 GBE2_MDI3P
10	R10 GBE1_MDI3N	20	R10 GBE2_MDI3N
L1_1	L1 LINK100J	L1_2	L1 LINK100J
L2_1	L2 LINK1000J	L2_2	L2 LINK1000J
L3_1	L3 GBE_ACTJ	L3_2	L3 GBE_ACTJ
L4_1	L4 P3V3	L4_2	L4 P3V3

2.3 I/O Interface Descriptions

2.3.21 LVDS Header

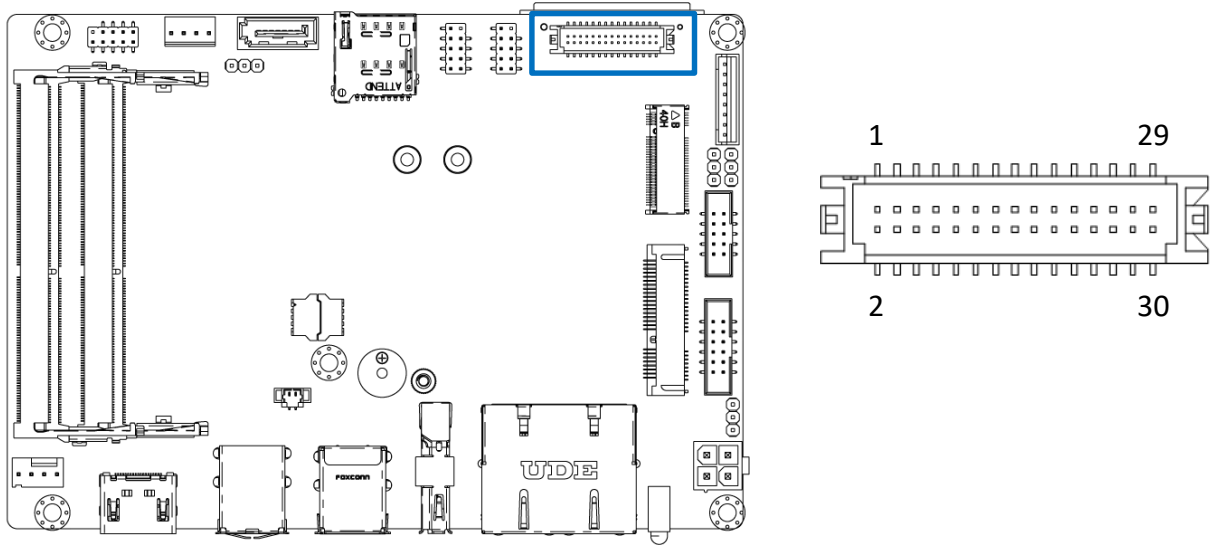


LVDS1

Pin	Signal	Pin	Signal
1	LB_DATA-N3	2	LB_DATA-P3
3	LB_CLK-N	4	LB_CLK-P
5	LB_DATA-N2	6	LB_DATA-P2
7	LB_DATA-N1	8	LB_DATA-P1
9	LB_DATA-N0	10	LB_DATA-P0
11	MIICSDA	12	MIIC_SCL
13	GND	14	GND
15	GND	16	GND
17	LA_DATA-P3	18	LA_DATA-N3
19	LA_CLK-P	20	LA_CLK-N
21	LA_DATA-P2	22	LA_DATA-N2
23	LA_DATA-P1	24	LA_DATA-N1
25	LA_DATA-P0	26	LA_DATA-N0
27	PNLPWR	28	PNLPWR
29	PNLPWR	30	PNLPWR

2.3 I/O Interface Descriptions

2.3.22 M.2 B key

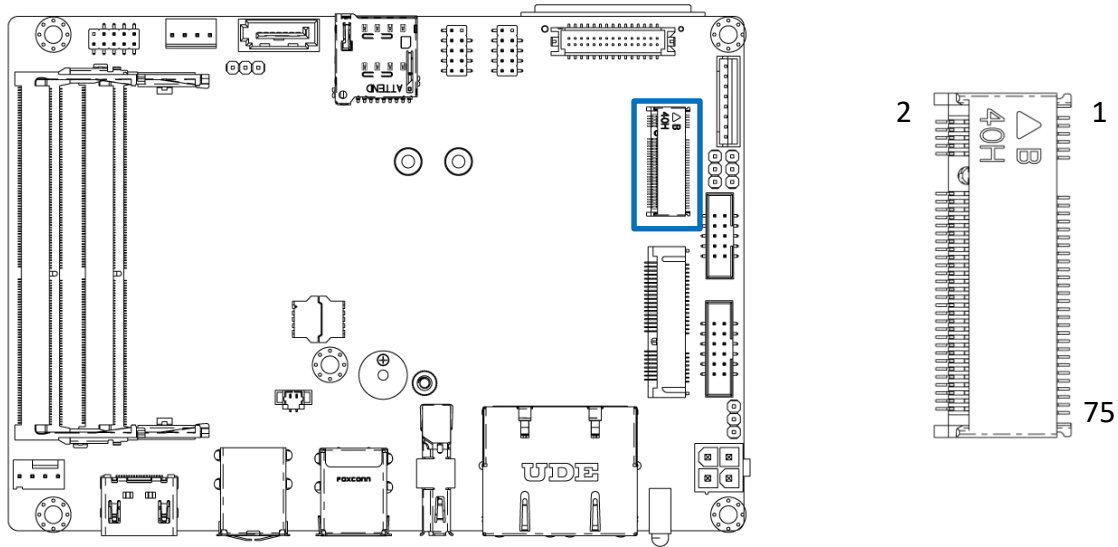


CN2

Pin	Signal	Pin	Signal
1	CONFIG_3	2	VCC1
3	GND	4	VCC2
5	GND	6	FULL_CARD_POWER_OFF#
7	USB_D+	8	W_DISABLE1#
9	USB_D-	10	WWAN_LED#
11	GND	12	NOTCH
13	NOTCH	14	NOTCH
15	NOTCH	16	NOTCH
17	NOTCH	18	NOTCH
19	NOTCH	20	GPIO_5(O/1.8V)
21	CONFIG_0	22	GPIO_6(O/1.8V)
23	GPIO_11(O/1.8V)	24	GPIO_7(O/1.8V)
25	DPR	26	GPIO_10(O/1.8V)
27	GND	28	GPIO_8(O/1.8V)
29	PERn1/USB3.0-Rx-	30	USIM1_RST
31	PERp1/USB3.0-Rx+	32	USIM1_CLK
33	GND	34	USIM1_DATA
35	PETn1/USB3.0-Tx-	36	USIM1_VDD
37	PETp1/USB3.0-Tx+	38	DEVSLP (O)
39	GND	40	USIM2_DET
41	PERn0/SATA-B+	42	USIM2_DATA

Pin	Signal	Pin	Signal
43	PERp0/SATA-B-	44	USIM2_CLK
45	GND	46	USIM2_RST
47	PETn0/SATA-A-	48	USIM2_VDD
49	PETp0/SATA-A+	50	PCIE_RST_N
51	GND	52	PCIE_CLKREQ_N
53	PCIE_REFCLK_M	54	PCIE_WAKE_N
55	PCIE_REFCLK_P	56	N/C
57	GND	58	N/C
59	ANTCTL0	60	COEX3(O/1.8V)
61	ANTCTL1	62	COEX2(O/1.8V)
63	ANTCTL2	64	COEX1(O/1.8V)
65	ANTCTL3	66	USIM1_DET
67	RESET_N	68	SUSCLK(32kHz)
69	CONFIG_1	70	VCC3
71	GND	72	VCC4
73	GND	74	VCC5
75	CONFIG_2	76	

2.3 I/O Interface Descriptions

2.3.23 SIM Card

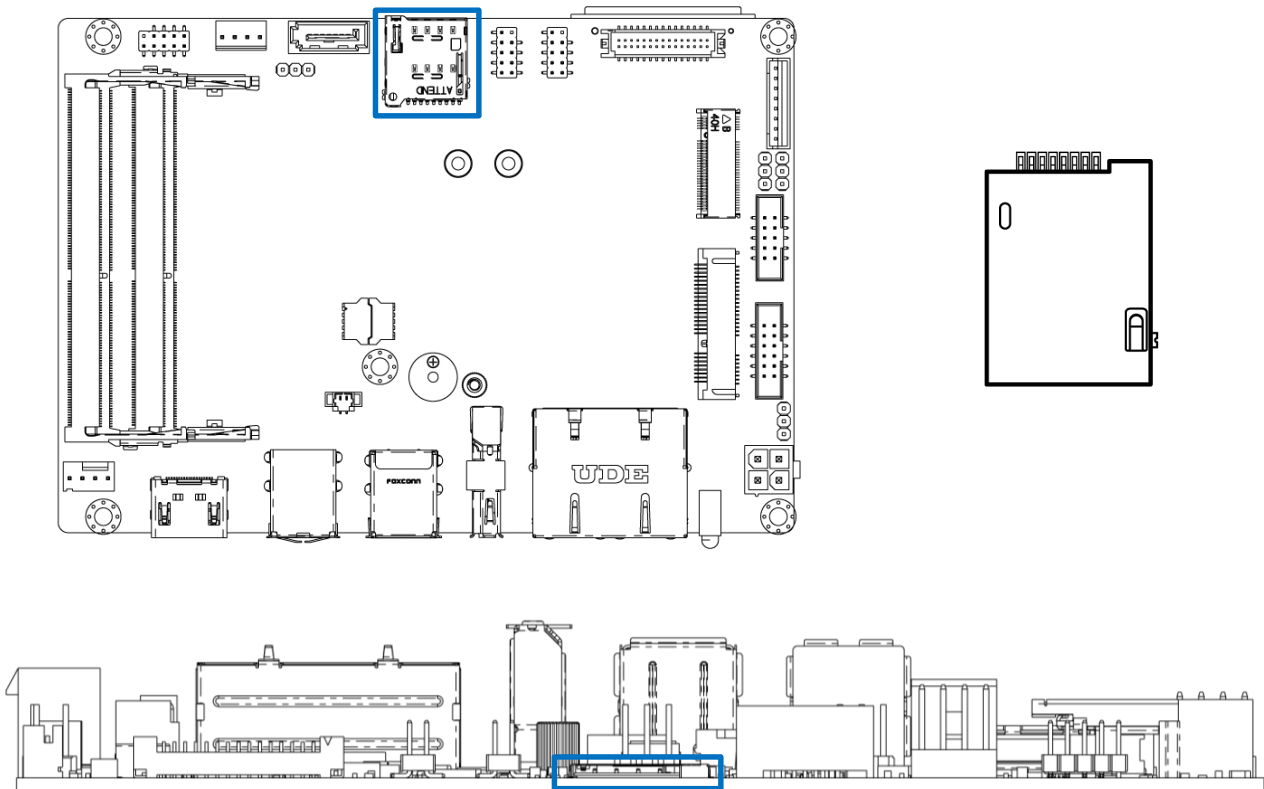


SIM2

Pin	Signal	Pin	Signal
1	VCC	2	RST
3	CLK	4	NC
5	GND	6	VPP
7	DATA	8	NC
9	CD		

2.3 I/O Interface Descriptions


2.3.24 Battery

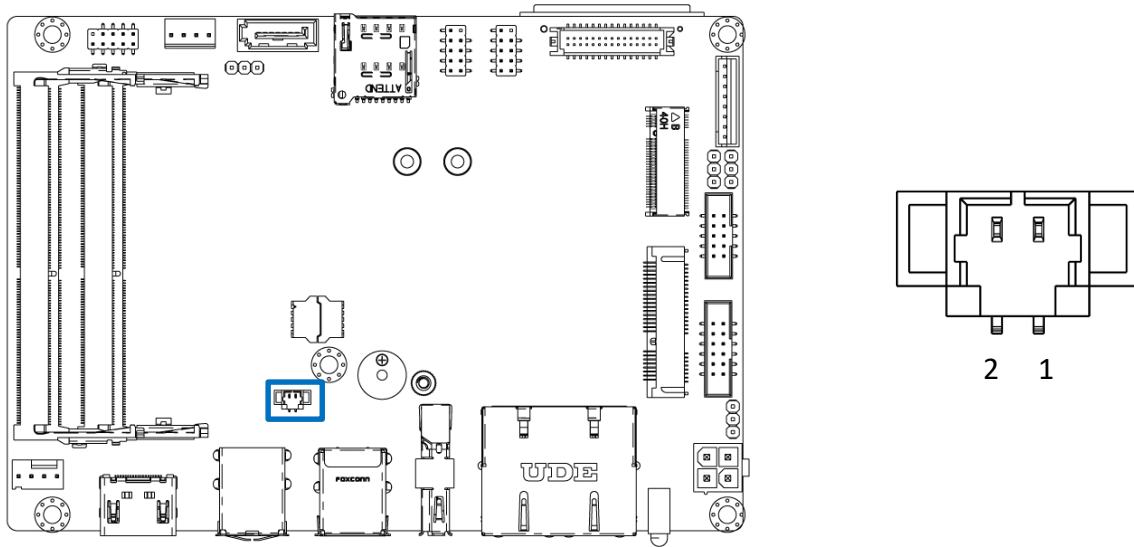

BAT1

Pin	Signal	Pin	Signal
1	Battery Power	2	GND

2.3.25 Buzzer

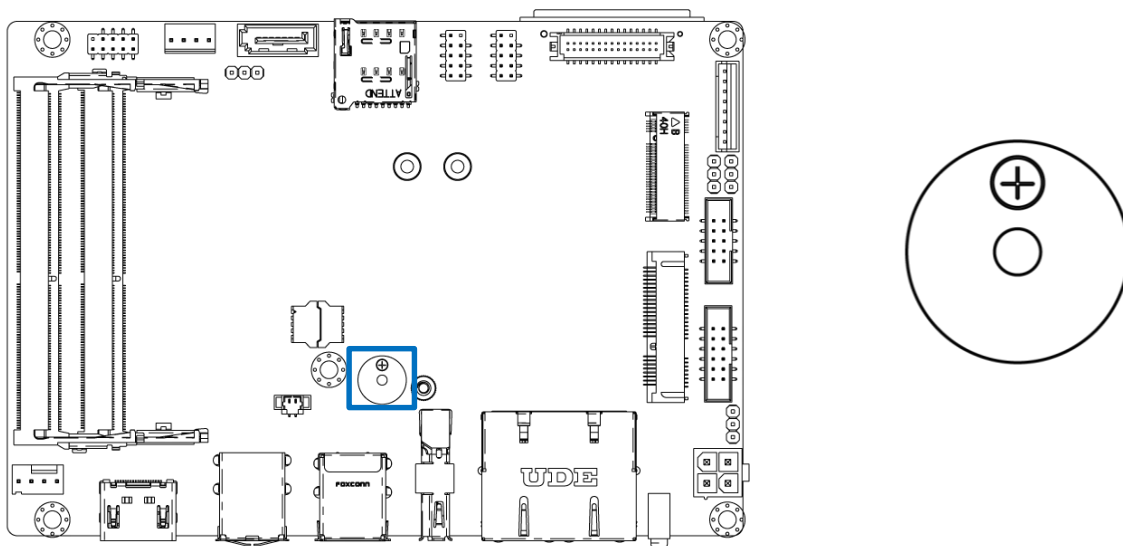


BZ1

Pin	Signal	Pin	Signal
1	Passive	2	Negative

2.3 I/O Interface Descriptions

2.3.26 Memory

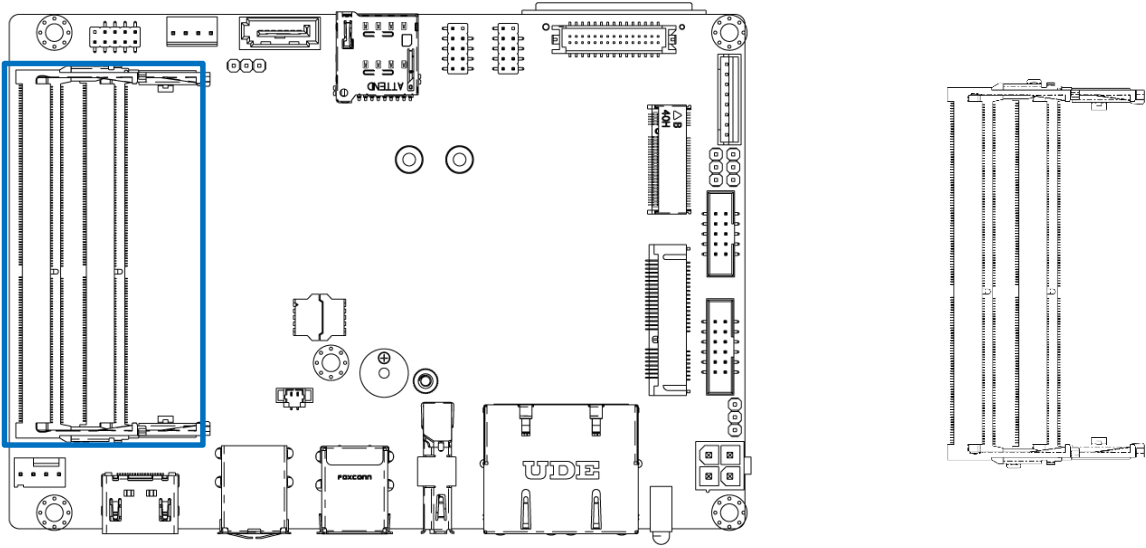




SODIMM1/SODIMM2 Socket

Chapter 3

System Setup


3.1 Heat Sink Installation



Heat sink x1	Board x1	Screw x5
		



Top view

Bottom view

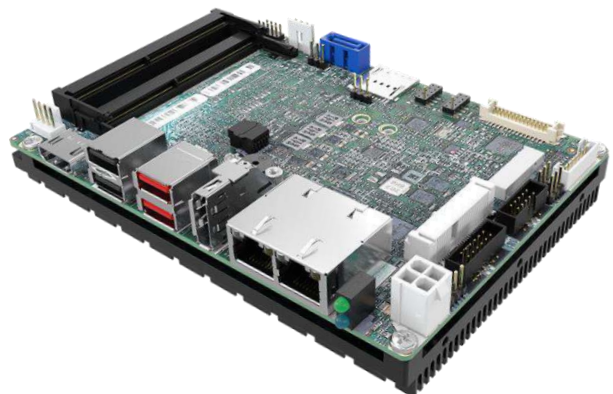

Heat Sink Installation (Standard)

Fasten the five screws below to lock the Heat sink.

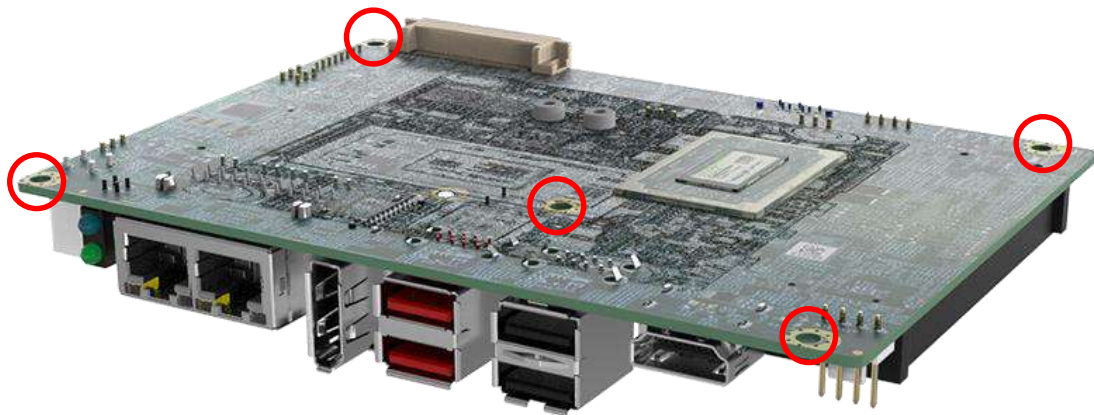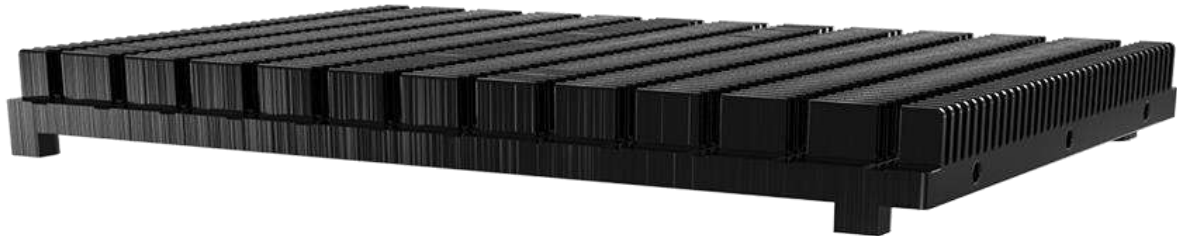

Chapter 4

System BIOS

4.1 BIOS Introduction

The BIOS provides an interface to modify the configuration. When the battery is removed, all the parameters will be reset.

BIOS Setup

Power on the embedded system and by pressing immediately allows you to enter the setup screens. If the message disappears before you respond and you still wish to enter the Setup, restart the system by turning it OFF and ON or pressing the RESET button.

You may also restart the system by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

Control Keys	
<→> <←>	Select Screen
<↑> <↓>	Select Item
<Enter>	Select
<Page Up/+>	Increases the numeric value or makes changes
<Page Down/->	Decreases the numeric value or makes changes
<F1>	General Help
<F2>	Previous Value
<F3>	Load Optimized Defaults
<F4>	Save Configuration and Exit
<Tab>	Select Setup Fields
<Esc>	Exit BIOS Setup

Main Setup

The main menu lists the setup functions you can make changes to. You can use the arrow keys (↑↓) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.

General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.

4.2 Main Setup

Press to enter BIOS CMOS Setup Utility. The Main setup screen is showed as following when the setup utility is entered. System Date/Time is set up in the Main Menu.




■ System Date

Set the system date. Please use <Tab> to switch between data elements.

■ System Time

Set the system time. Please use <Tab> to switch between time elements.

4.3 Advanced Setup

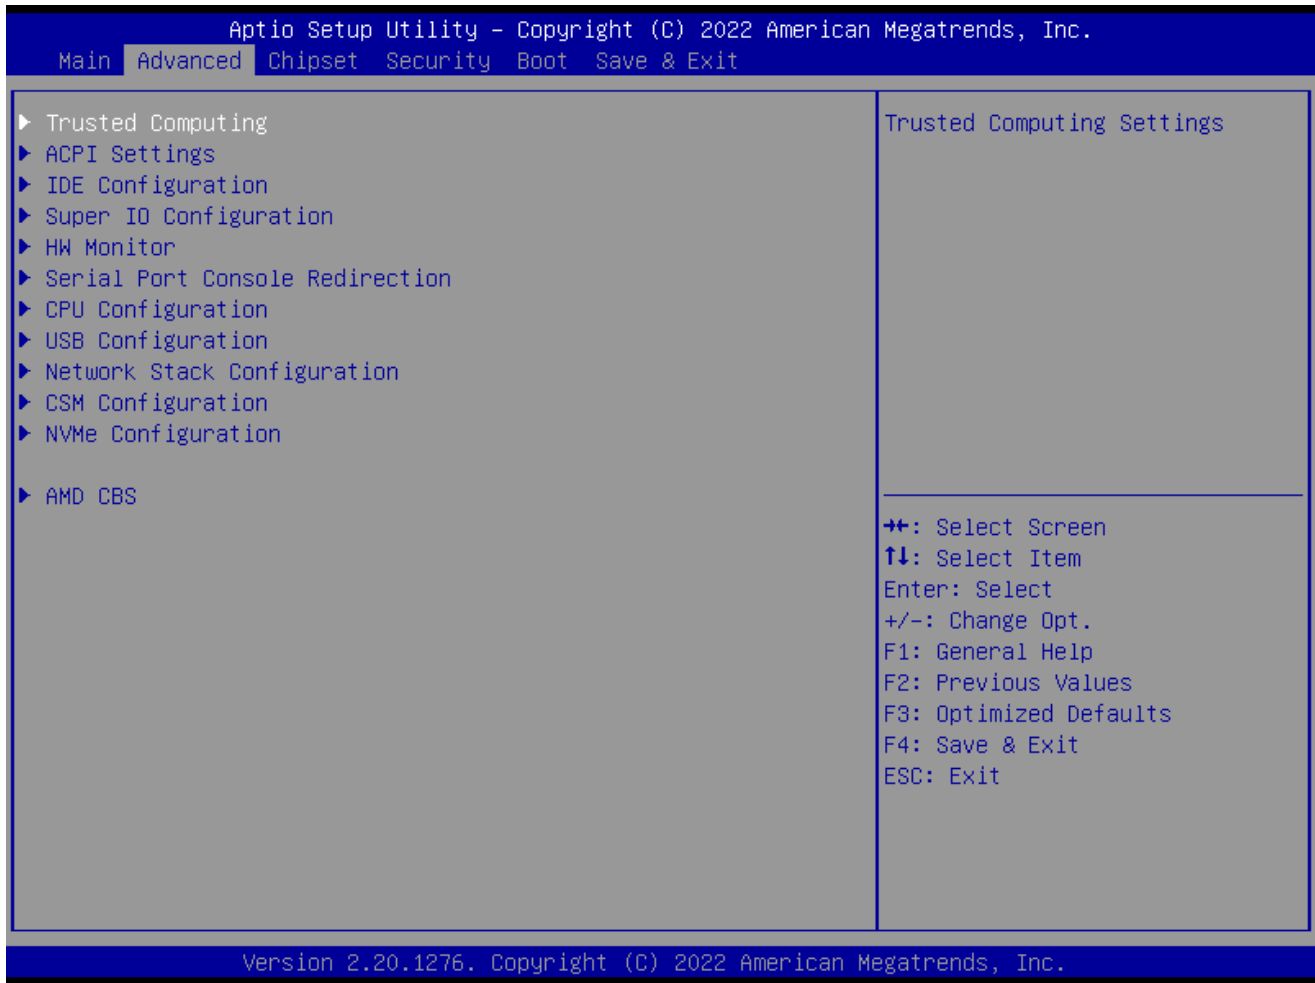

4.3.1 Trusted Computing




Item	Options	Description
Security Device Support	Enabled, Disabled [Default] ,	Enable/Disable BIOS support for security device. O.S. will not show Security Device.TCG EFI protocol and INT1A interface will not be available.
Pending operation	None [Default] , TPM Clear	Schedule an Operation for the Security Device. NOTE: Your Computer will reboot during restart in order to change State of Security Device.

4.3.2 ACPI Settings




Item	Options	Description
Enable Hibernation	Disabled , Enabled[Default],	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some operating systems.
ACPI Sleep State	Suspend Disabled, S3 (Suspend to RAM)[Default]	Select the highest ACPI sleep state the system will enter when the SUSPEDN button is pressed.

4.3.3 IDE Configuration

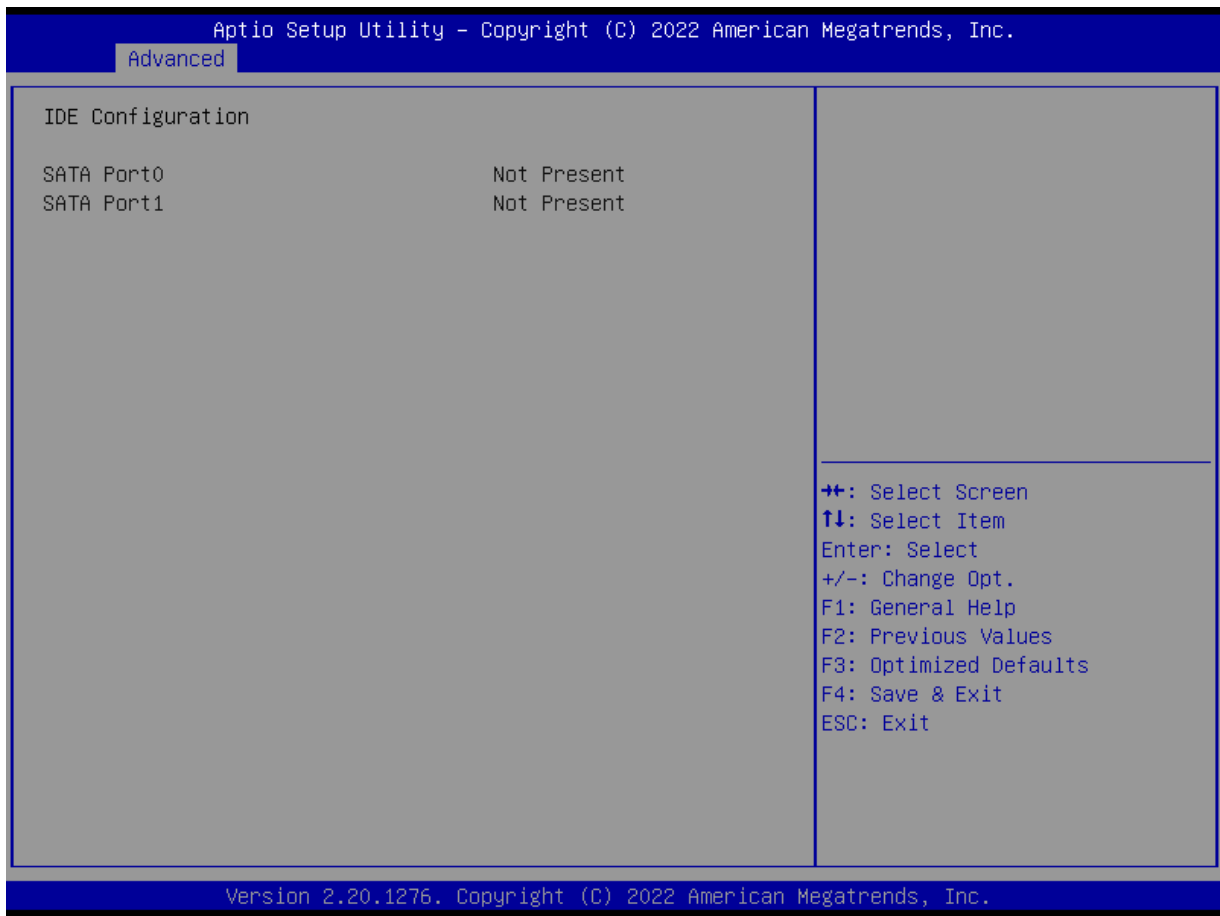

4.3.4 Super IO Configuration


This setting allows you to select options for the Super IO Configuration, and change the value of the selected option.

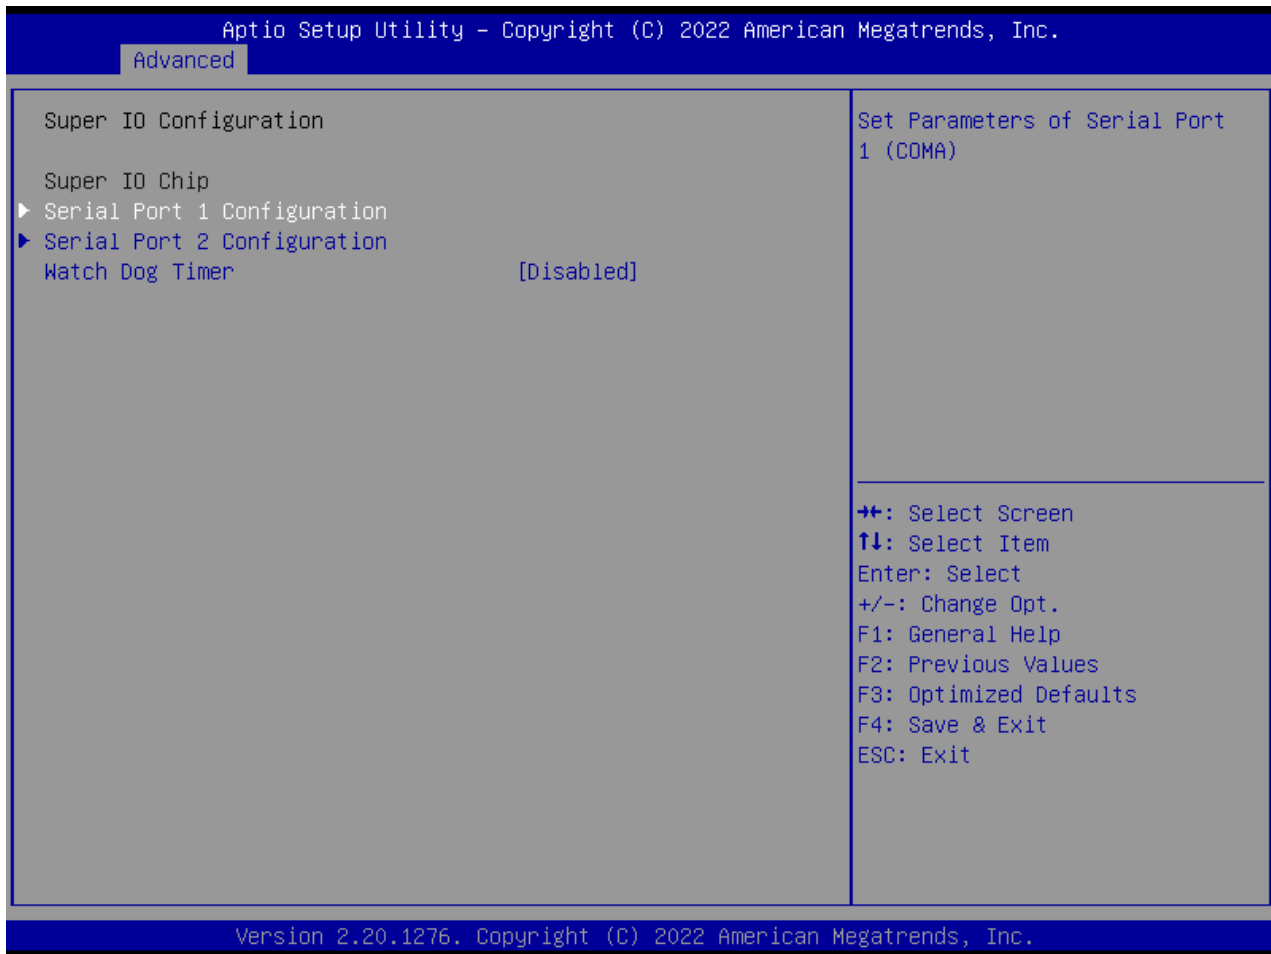

Item	Description
Serial Port 1 Configuration	Set Parameters of Serial Port 1 (COMA).
Serial Port 2 Configuration	Set Parameters of Serial Port 2 (COMB).


Item	Options	Description
Watch Dog Timer	Disabled [Default], Enabled	Enabled or Disabled Watch Dog Timer function.
Watch Dog Timer Count Mode	Second Mode[Default], Minute Mode	Select Second Mode or Minute Mode.
Watch Dog Timer Time out Value	20~255(Second)[Default], 1~255(Minute)	Watch Dog Timer Time out Value.

Serial Port 1 Configuration

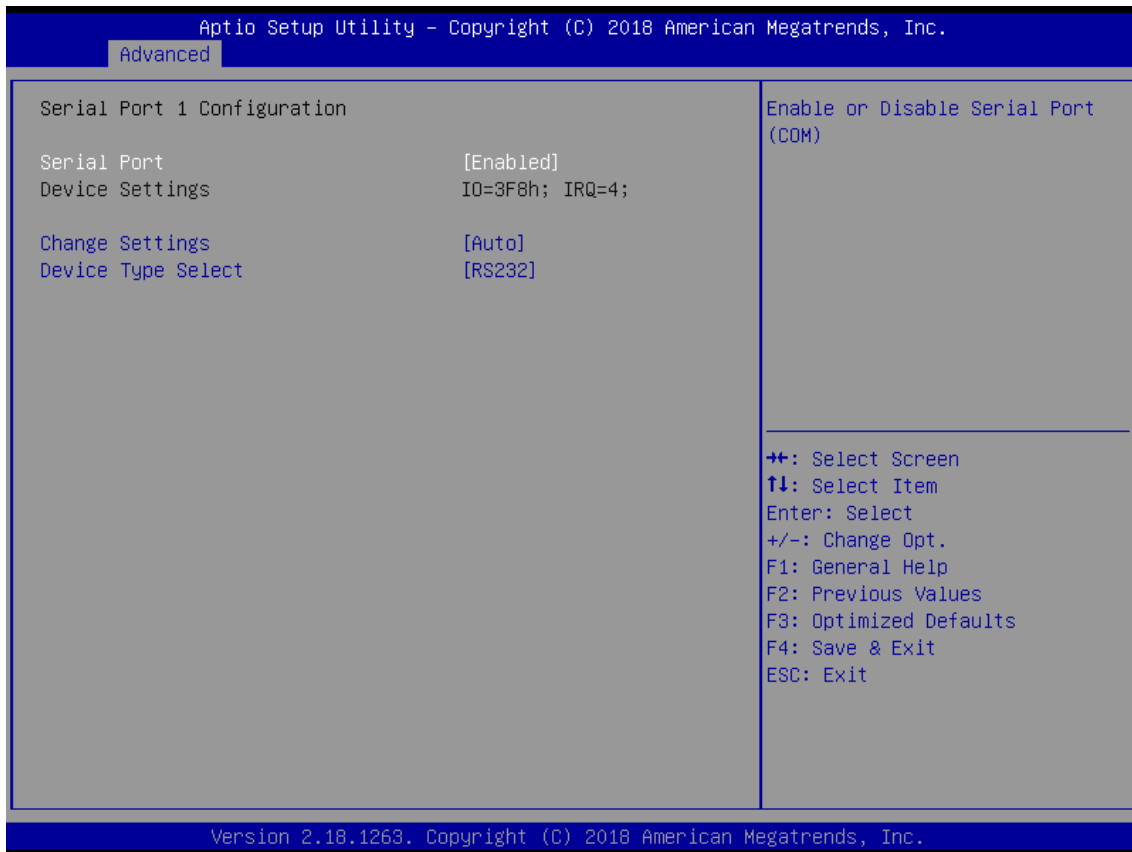

Item	Options	Description
Serial Port	Disabled, Enabled[Default]	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=3F8h; IRQ=4; , IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;; IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;; IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;	This item allows you to change the address & IRQ settings of the specified serial port.
Device Type Select	UART 232[Default], UART 422, UART 485	Set the Serial Port to RS232 & RS422 & RS485
RS-485 Auto Flow Function	Disabled, Enabled[Default]	Enabled/Disabled RS485 Autoflow Function


Serial Port 2 Configuration

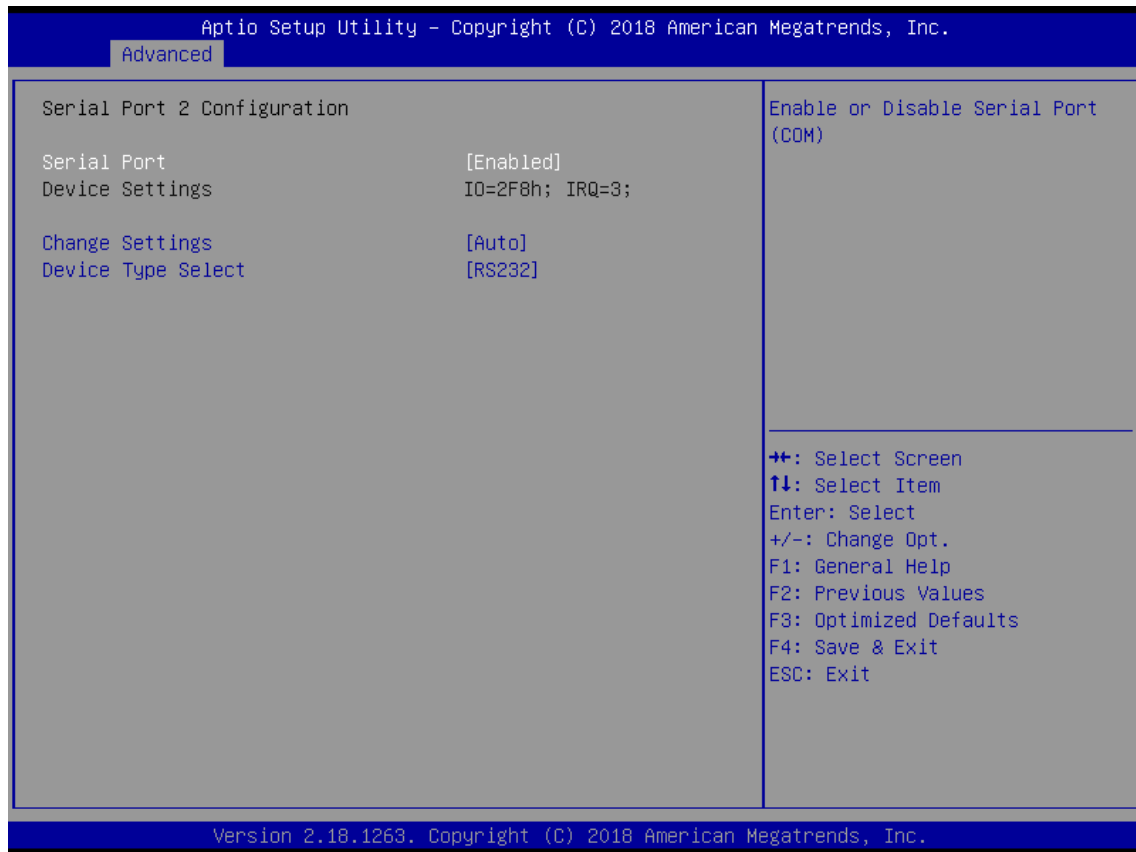

Item	Options	Description
Serial Port	Disabled, Enabled[Default]	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=2F8h; IRQ=3; , IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12; , IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;; IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;; IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;	This item allows you to change the address & IRQ settings of the specified serial port.
Device Type Select	UART 232[Default], UART 422, UART 485	Set the Serial Port to RS232 & RS422 & RS485
RS-485 Auto Flow Function	Disabled, Enabled[Default]	Enabled/Disabled RS485 Autoflow Function


4.3.5 Hardware Monitor

These items display the current status of all monitored hardware devices/ components such as voltages and temperatures.

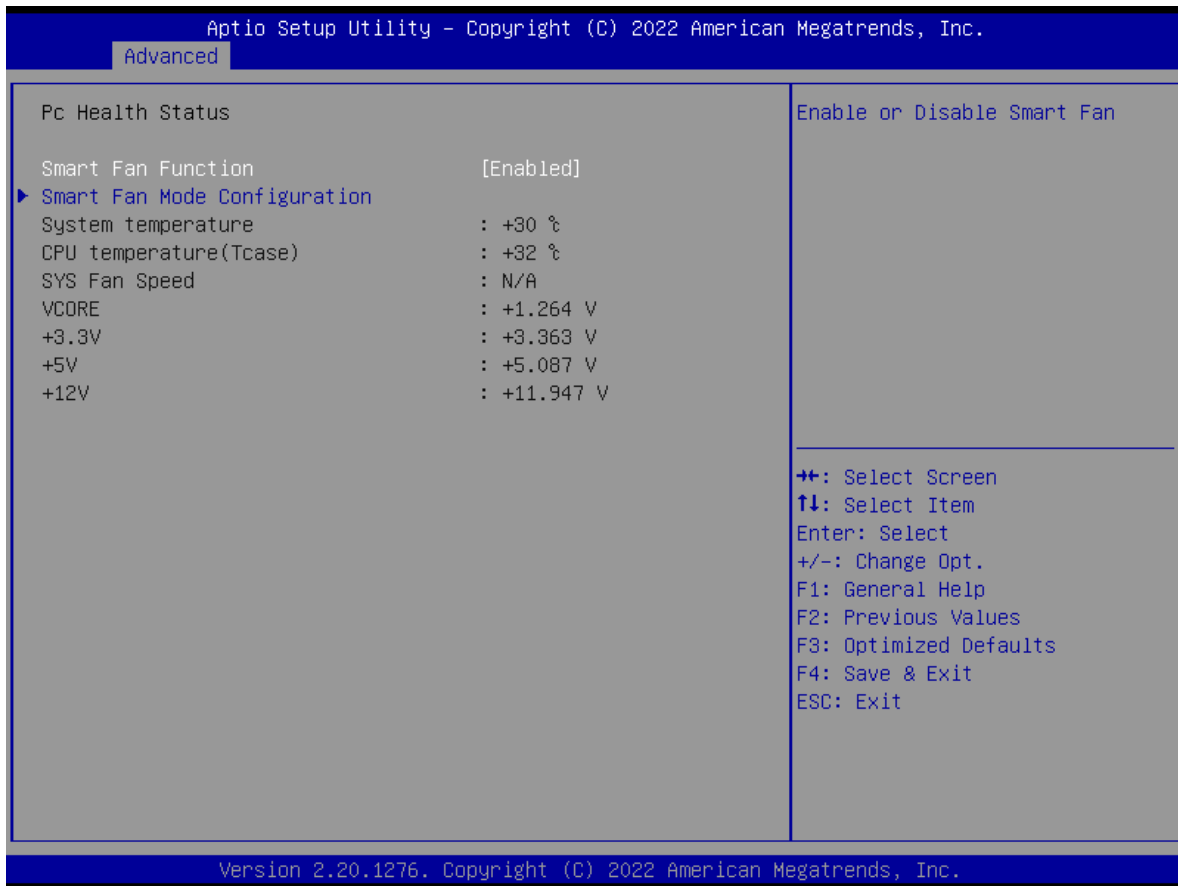

Item	Options	Description
Smart Fan Function	Disabled[Default], Enabled	Enabled or Disable Smart Fan

Smart Fan Mode Configuration

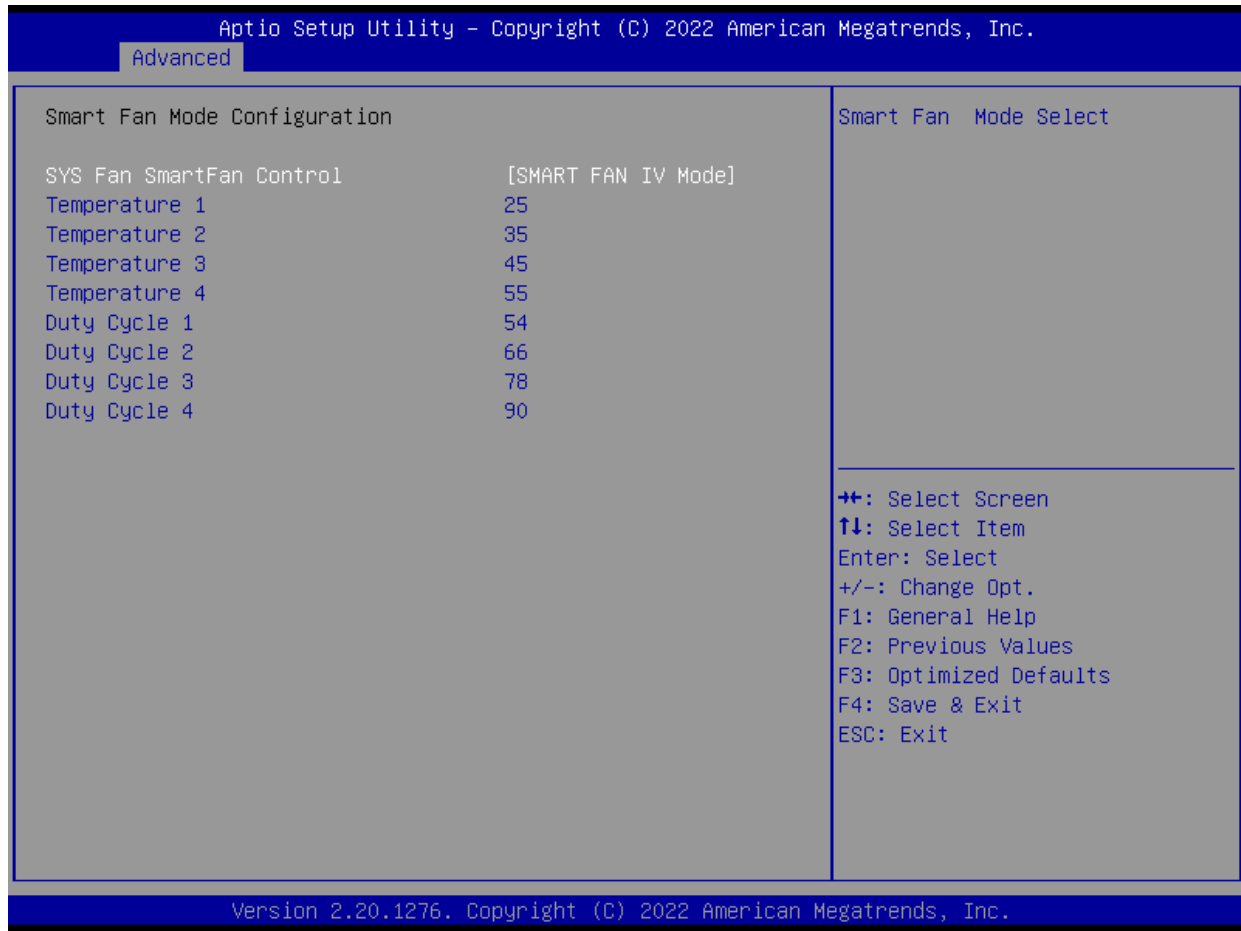

Item	Options	Description
SYS Fan SmartFan Control	Manual Mode, Thermal Cruise Mode, SMART FAN IV Mode[Default],	Smart Fan Mode Select
Temperature 1~4	1~100	Auto fan speed control. SMART FAN IV
Duty Cycle 1~4	1~100	Auto fan speed control. SMART FAN IV

4.3.6 Serial Port Console Redirection



Item	Options	Description
Console Redirection	Disabled[Default], Enabled	These items allows you to enable or disable COM1 console redirection

Console Redirection Settings




Item	Options	Description
Terminal Type	VT100 VT100+, VT-UTF8, ANSI [Default] ,	Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
Bits per second	9600, 19200, 38400, 57600, 115200 [Default] ,	Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.
Data Bits	7, 8 [Default]	Data Bits
Parity	None [Default] , Even, Odd, Mark, Space	A parity bit can be sent with the data bits to detect some transmission errors. Even: parity bit is 0 if the num of 1's in the data bits is even. Odd: parity bit is 0 if num of 1's in the data bits is odd. Mark: parity bit is always 1. Space: Parity bit is always 0. Mark and Space Parity do not allow for error detection. They can be used as an additional data bit.
Stop Bits	1 [Default] , 2	Stop bits indicate the end of a serial data packet.
Flow Control	<i>None</i> [Default] , <i>Hardware RTS/CTS</i>	Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.
VT-UTF8 Combo Key Support	Disabled, Enabled [Default]	Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals
Recorder Mode	Disabled [Default] , Enabled	With this mode enabled only text will be sent. This is to capture Terminal data.
Resolution 100x31	Disabled [Default] , Enabled	Enables or disables extended terminal resolution
Putty KeyPad	VT100 [Default] , LINUX,XTERMR6, SCO,ESCN,VT400	Select FunctionKey and KeyPad on Putty.

4.3.7 CPU Configuration




Item	Options	Description
PSS Support	Disabled, Enabled[Default]	Enable/disable the generation of ACPI _PPC, _PSS, and _PCT objects.
NX Mode	Disabled, Enabled[Default]	Enable/disable No-execute page protection Function
SVM Mode	Disabled, Enabled[Default]	Enable/disable CPU Virtualization

4.3.8 USB Configuration

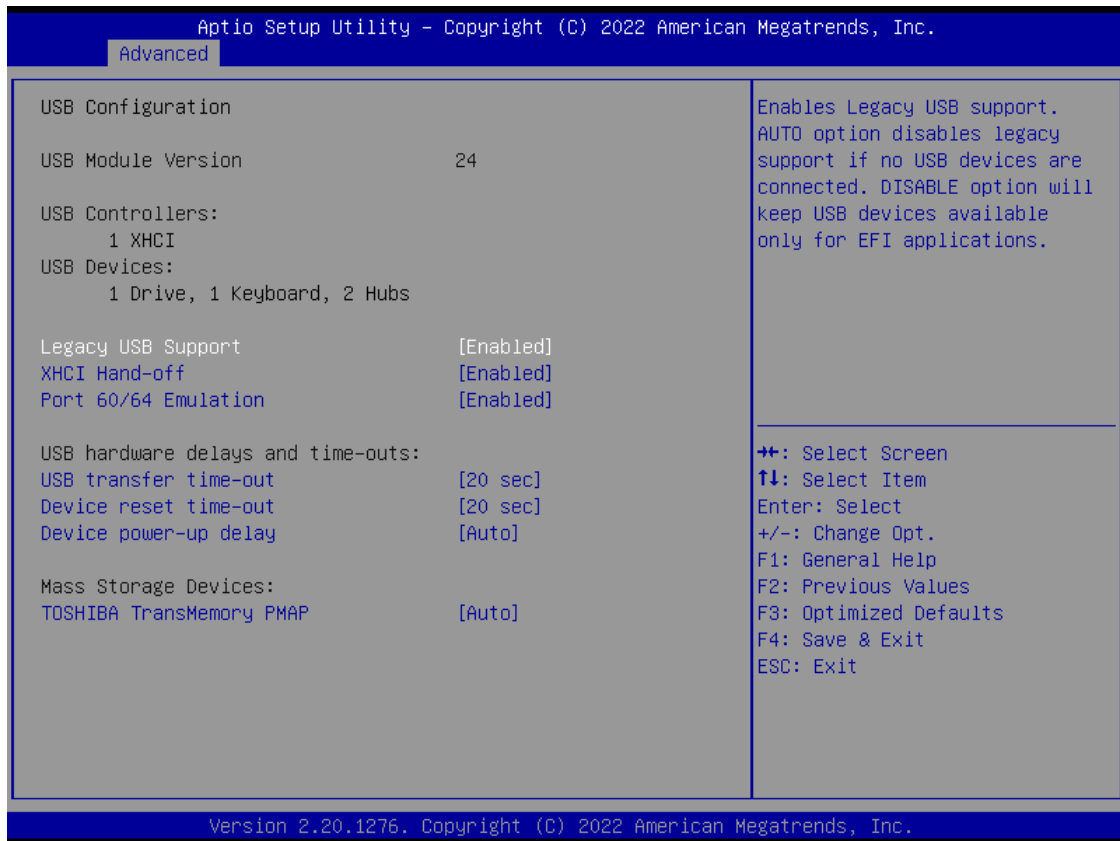


Item	Options	Description
Legacy USB Support	Enabled[Default] Disabled Auto	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
XHCI Hand-off	Enabled[Default] Disabled	This is a workaround for OSeW without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB transfer time-out	1 sec , 5 sec , 10 sec , 20 sec[Default]	The time-out value for Control, Bulk, and Interrupt transfers.
Device reset time-out	10 sec , 20 sec[Default] , 30 sec, 40 sec	USB mass storage device Start Unit command time-out.
Device power-up delay	Auto[Default] Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.

4.3.9 Network Stack Configuration

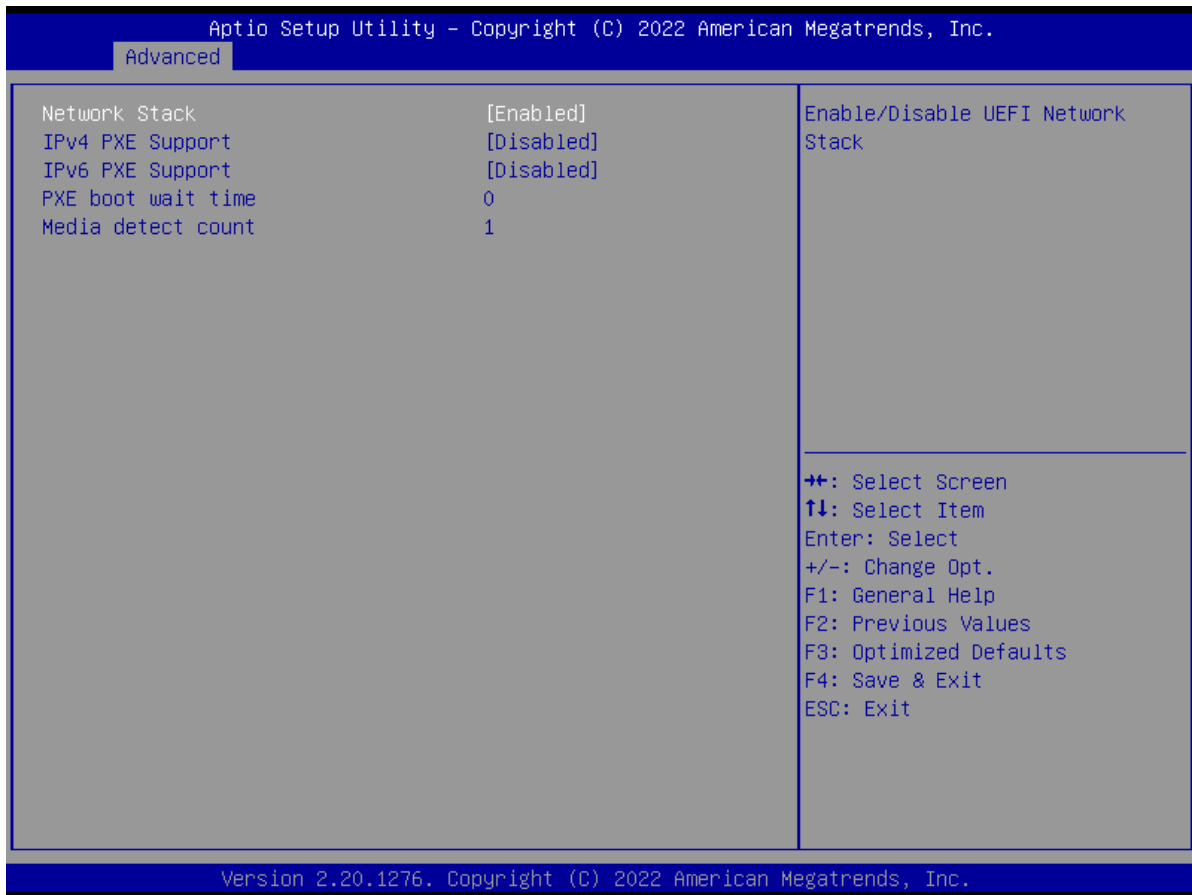

Item	Options	Description
Network Stack	Disabled[Default] , Enabled	Enable/Disable UEFI Network Stack.
IPv4 PXE Support	Disabled[Default] , Enabled	Enable/Disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.
IPv6 PXE Support	Disabled[Default] , Enabled	Enable/Disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available.
PXE boot wait time	0[Default]	Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.
Media detect count	1[Default]	Number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

4.3.10 CSM Configuration

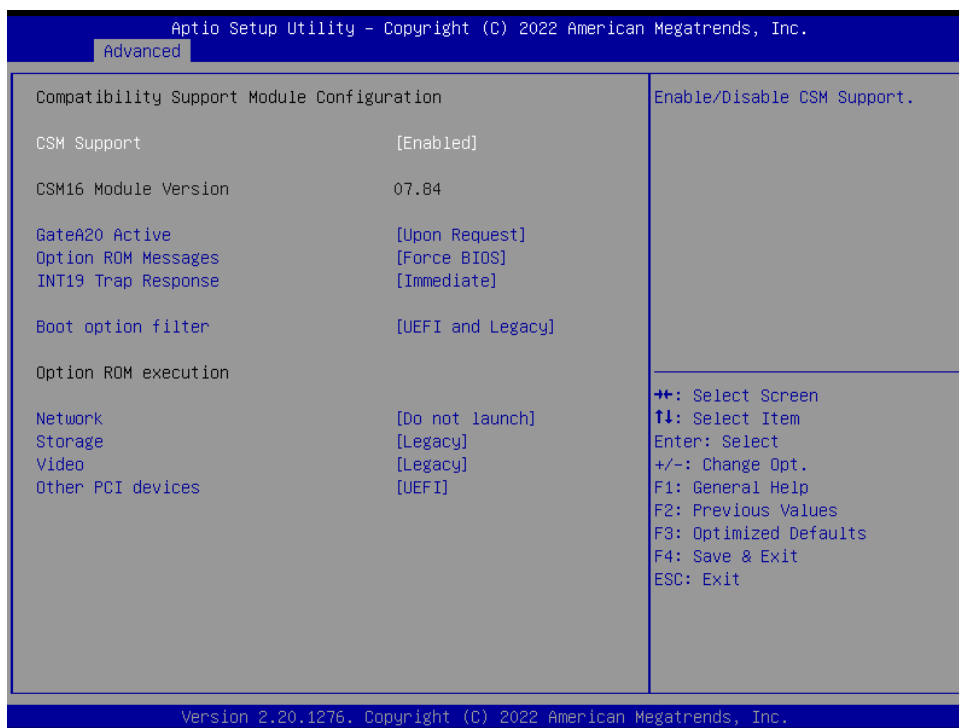

Item	Options	Description
CSM Support	Disabled [Default] , Enabled	This item allows users to enable or disable for “CSM Support”.
GateA20 Active	Upon Request [Default] , Always	This item allows users to set Upon Request or Always for "GateA20 Active”.
Option ROM Messages	Force BIOS [Default] , Keep Current	Set display mode for Option ROM
INT19 Trap Response	Immediate [Default] , Postponed	This item allows users to set the BIOS reaction to INT19 trapping by Option ROM: “Immediate” - execute the trap right away; “postponed” - execute the trap during legacy boot.
Boot option filter	UEFI and Legacy [Default] , Legacy only, UEFI only	This item allows users to select which type of operating system to boot by option. This item is configurable only when CSM Support is set to Enabled.
Network	Do not launch [Default] , UEFI, Legacy	Controls the execution of UEFI and Legacy Video OpROM.
Storage	Do not launch, UEFI [Default] , Legacy	Controls the execution of UEFI and Legacy Storage OpROM.
Video	Do not launch, UEFI, Legacy [Default]	Controls the execution of UEFI and Legacy Video OpROM
Other PCI devices	Do not launch, UEFI [Default] , Legacy	Determines OpROM execution policy for devices other than Network, Storage, or Video.

4.3.11 AMD CBS




Item	Options	Description
AC Loss Control	Power Off[Default] , Power On, Last State	Specify what state to go to when power is re-applied after a power failure (G3 state).
Hd Audio	Enable Audio[Default] , Disable Audio	HD Audio Control.

4.4 Chipset

This section allows you to configure and improve your system and allows you to set up some system features according to your reference.




4.4.1 SB USB Configuration

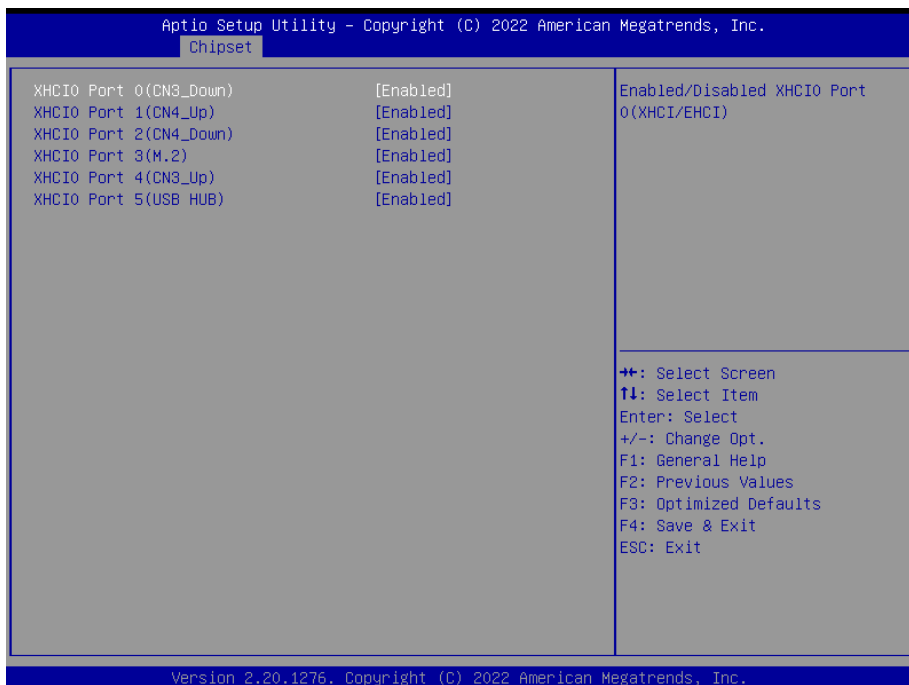

Item	Options	Description
XHCI0 Port X	Enabled[Default], Disabled	Enabled/Disabled XHCI0 Port


4.4.2 North Bridge Configuration

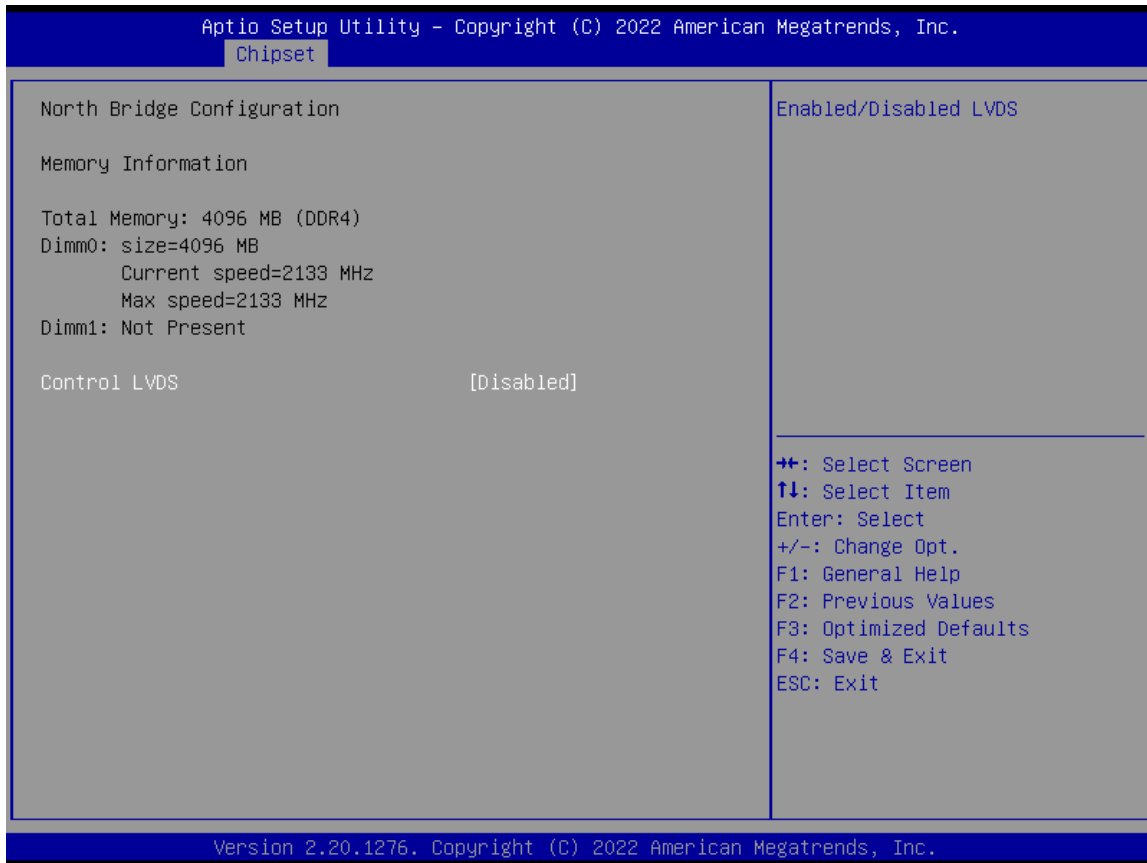

Item	Options	Description
Control LVDS	Disabled[Default], Enabled	Enabled/Disabled LVDS

4.5 Security

Security menu allow users to change administrator password and user password settings.

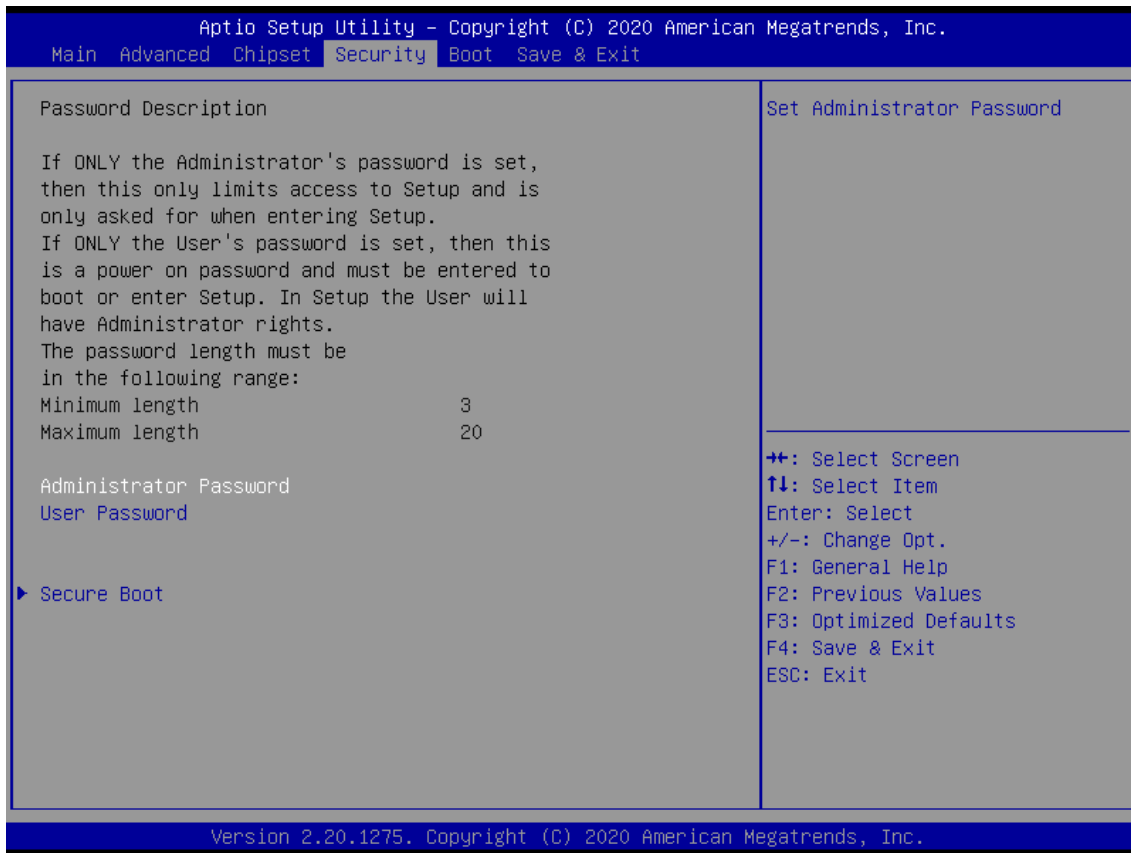


■ Administrator Password

This item allows you to set Administrator Password.

■ User Password


This item allows you to set User Password.

■ Security Boot

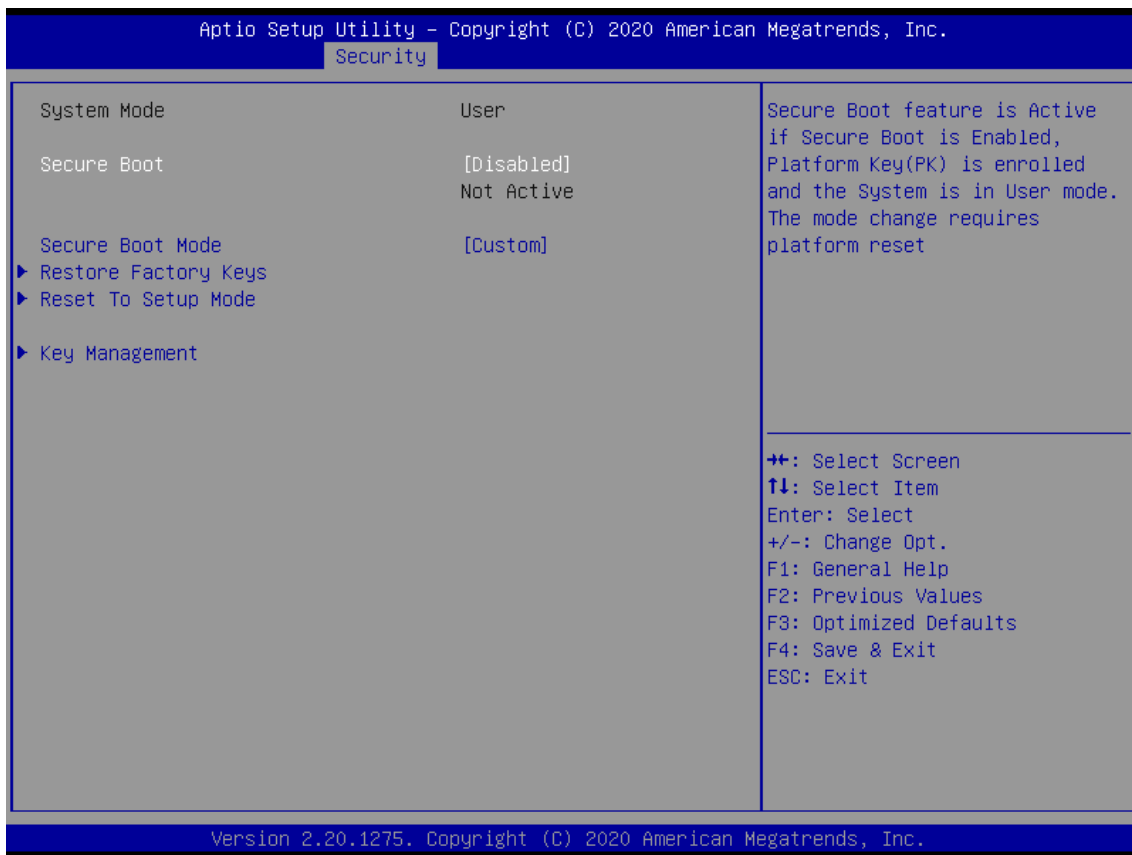

Item	Options	Description
Secure Boot	Disabled [Default] , Enabled	Secure Boot feature is Active if Secure Boot is Enabled, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset
Secure Boot Mode	Standard, Custom [Default]	Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication


■ Key Management

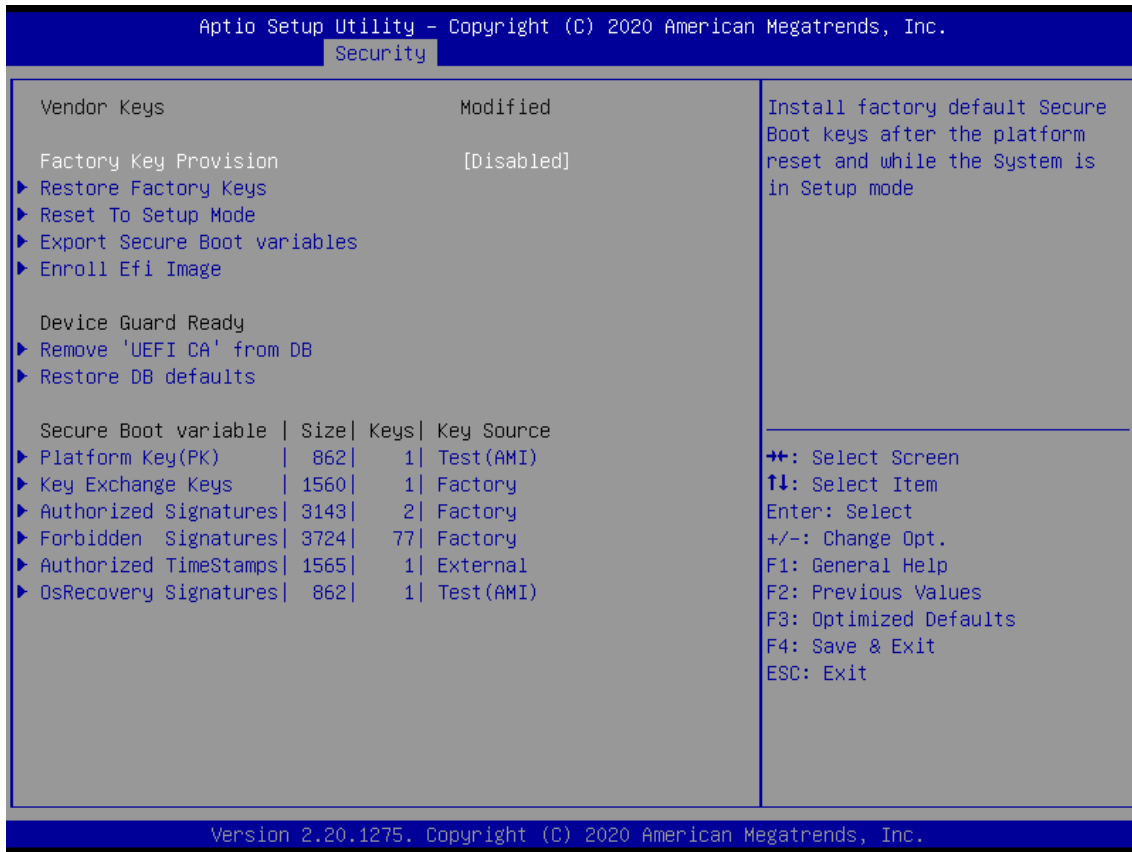

Item	Options	Description
Factory Key Provision	Disabled [Default] , Enabled	Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode

4.6 Boot


This menu allows you to setup the system boot options.

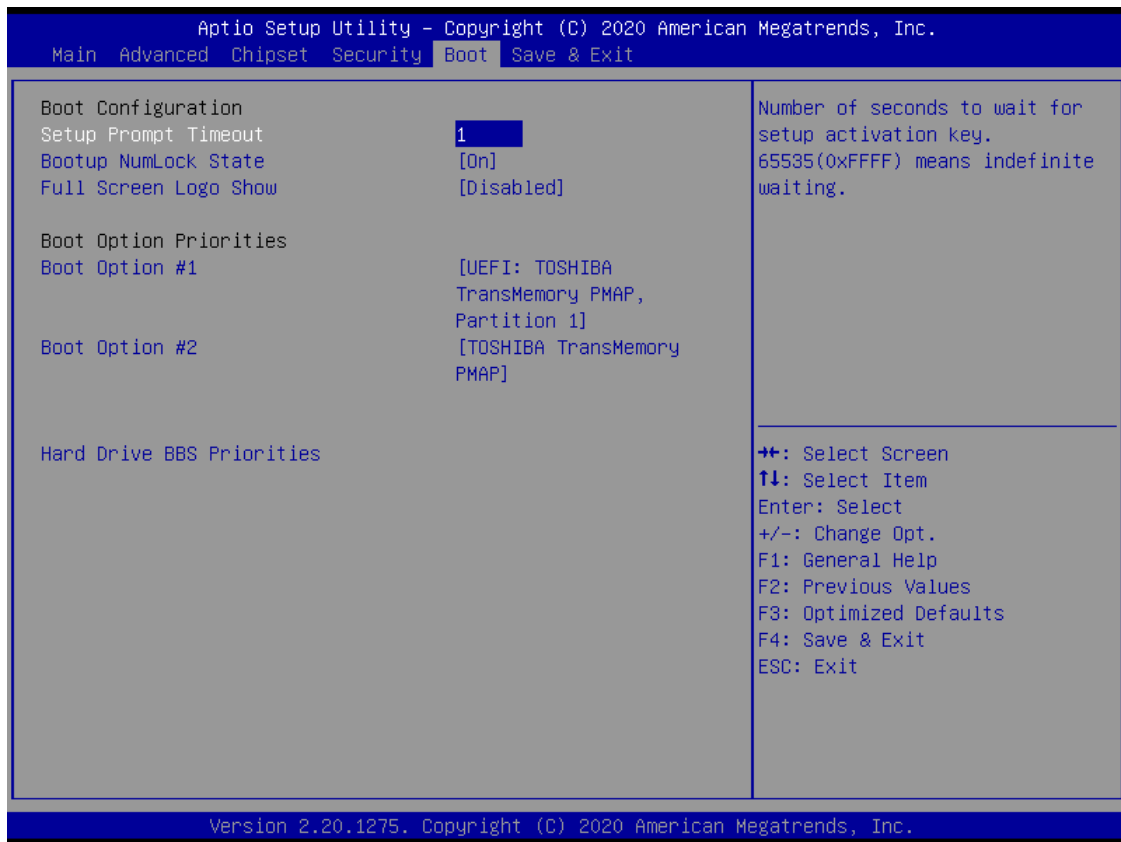

Item	Options	Description
Setup Prompt Timeout	1[Default]	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On[Default], Off	Select the Keyboard NumLock state.
Full Screen Logo Show	Disabled[Default], Enabled	Enables or disables Full Screen Logo Show option.
Boot Option #1		Set the system boot order.

4.7 Save & Exit

This setting allows users to configure the boot settings.

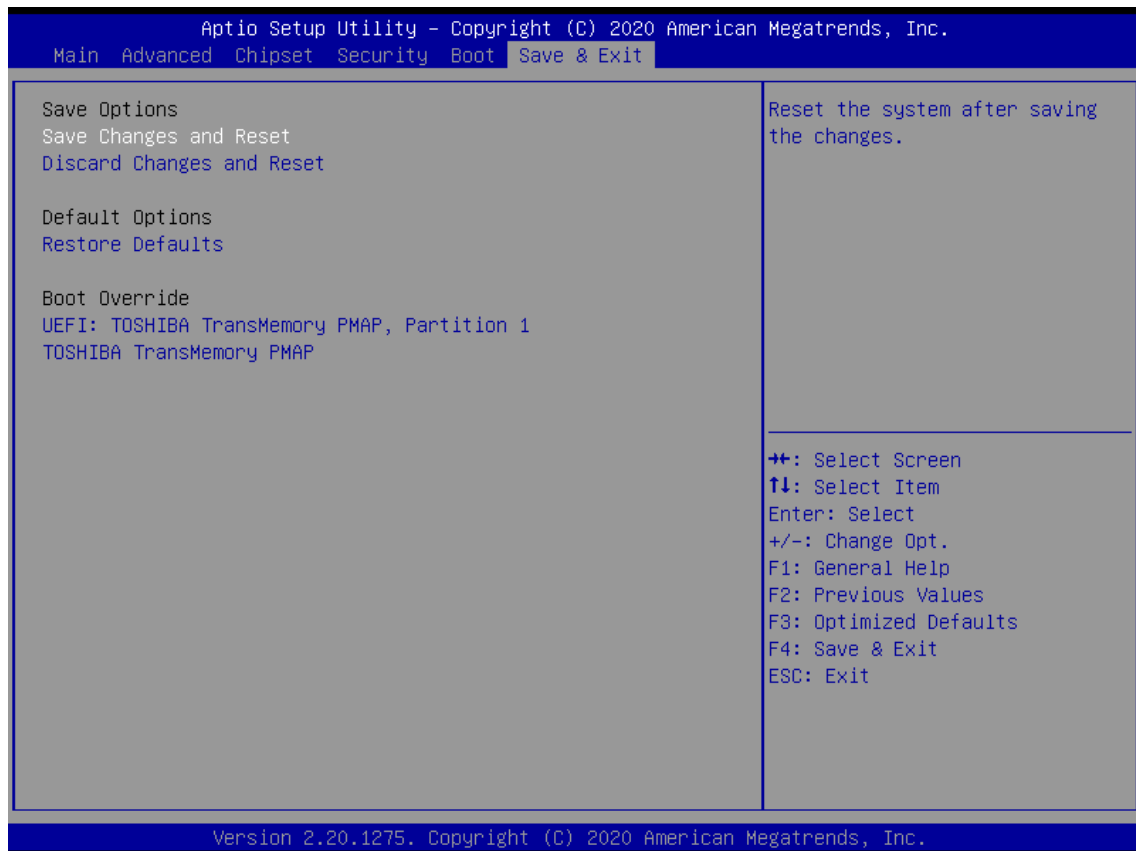

■ Save Changes and Reset

This item allows user to reset the system after saving the changes. This item allows user to reset the system after saving the changes.

■ Discard Changes and Reset

This item allows user to reset the system without saving any changes.

■ Restore Defaults

Use this item to restore /load default values for all the setup options.

Appendix

WDT & GPIO

This appendix provides the sample codes of WDT (Watch Dog Timer) and GPIO (General Purpose Input/ Output).

WDT Sample Code

WDT Setting


Pseudo Code

```
UINT8   WDT_TimeOut_Sec=2;           //Second value

//Set Second Number
*(volatile UINT32 *)0xFEB00000= 0x03; //Initialization WatchdogControl
  IoWrite8(0x80,0xFF);                //Delay time
  *(volatile UINT32 *)0xFEB00004= WDT_TimeOut_Sec; //Set watch dog time value(Bit15~Bit0)
  IoWrite8(0x80,0xFF);
  *(volatile UINT32 *)0xFEB00000= 0xFB; //Start watch dog
  IoWrite8(0x80,0xFF);
}
```

GPIO Sample Code

GPIO Setting

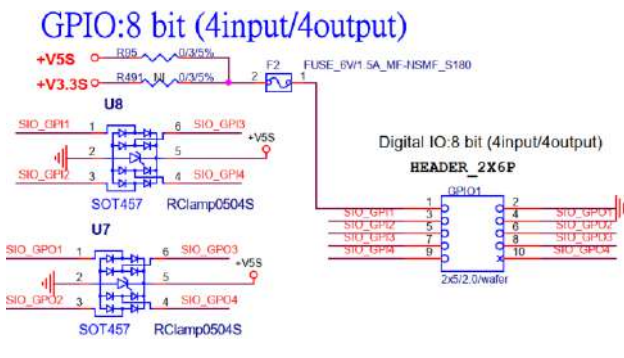

PIN#	GPIO#	Default Configuration
1	VCC	+V5S
2	GND	GND
3	IN1	DIO Input1
4	OUT1	DIO Output1
5	IN2	DIO Input2
6	OUT2	DIO Output2
7	IN3	DIO Input3
8	OUT3	DIO Output3
9	IN4	DIO Input4
10	OUT4	DIO Output4

The GPIO function is provided by Nuvoton NCT6106D, and it can be accessed through its GPIO index/data port. To access the GPIO register, write index to the index port, and then read/write from/to data port. The configuration on the CT-DR101 is described as below.

Psuedo Code

```
#define AddrPort          0x2e
#define DataPort          0x2f
#define SIO_UnLock_Value 0x87
#define SIO_Lock_Value   0xaa
#define SIO_LDN_GPIO     0x07
#define GPIO_Port        0xF1
```

```
//Enter_Config
WriteByte (AddrPort, SIO_UnLock_Value);
WriteByte (AddrPort, SIO_UnLock_Value);
```

```
WriteByte (AddrPort, 0x07);
WriteByte (DataPort, SIO_LDN_GPIO);
```

```
//Set OUT1~OUT8Value
WriteByte (AddrPort, GPIO_Port);
WriteByte (DataPort, 0x00); //set OUT1~OUT4 value, OUT1=Bit0, OUT2=Bit1
```

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
NC	NC	NC	NC	OUT4	OUT3	OUT2	OUT1

```
// Read In1~In8 value
WriteByte (AddrPort, 0xED);
Data= ReadByte (DataPort); //Read In1~In4 value
```

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
NC	NC	NC	NC	IN4	IN3	IN2	IN1

```
// close config mode
WriteByte (AddrPort, SIO_Lock_Value);
```

